

64000

**HP64000
Logic Development
System**

**Model 64161A/162A/163A
Emulation Memory**



**HEWLETT
PACKARD**

CERTIFICATION

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY

This Hewlett-Packard system product is warranted against defects in materials and workmanship for a period of 90 days from date of installation. During the warranty period, HP will, at its options, either repair or replace products which prove to be defective.

Warranty service of this product will be performed at Buyer's facility at no charge within HP service travel areas. Outside HP service travel areas, warranty service will be performed at Buyer's facility only upon HP's prior agreement and Buyer shall pay HP's round trip travel expenses. In all other cases, products must be returned to a service facility designated by HP.

For products returned to HP for warranty service. Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

HP warrants that its software and firmware designated by HP for use with an instrument will execute its programming instructions when properly installed on that instrument. HP does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error free.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

ASSISTANCE

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

SERVICE MANUAL

MODEL 64161A/162A/163A

EMULATION MEMORY

REPAIR NUMBERS

This manual applies to Model 64161A all repair number prefixes. For more information on repair numbers refer to "Instruments Covered by This Manual" in Section I.

© COPYRIGHT HEWLETT-PACKARD COMPANY 1982
LOGIC SYSTEMS DIVISION
COLORADO SPRINGS, COLORADO, U.S.A.

ALL RIGHTS RESERVED

Manual Part No. 64161-90901
Microfiche Part No. 64161-90801

PRINTED: JANUARY 1984
UPDATED: MAY 1984

SAFETY SUMMARY

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.

GROUND THE INSTRUMENT.

To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument is equipped with a three-conductor ac power cable. The power cable must either be plugged into an approved three-contact electrical outlet or used with a three-contact to two-contact adapter with the grounding wire (green) firmly connected to an electrical ground (safety ground) at the power outlet. The power jack and mating plug of the power cable meet International Electrotechnical Commission (IEC) safety standards.

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE.

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

KEEP AWAY FROM LIVE CIRCUITS.

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Do not replace components with power cable connected. Under certain conditions, dangerous voltages may exist even with the power cable removed. To avoid injuries, always disconnect power and discharge circuits before touching them.

DO NOT SERVICE OR ADJUST ALONE.

Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT.

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification of the instrument. Return the instrument to a Hewlett-Packard Sales and Service Office for service and repair to ensure that safety features are maintained.

DANGEROUS PROCEDURE WARNINGS.

Warnings, such as the example below, precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed.

WARNING

**Dangerous voltages, capable of causing death, are present in this instrument.
Use extreme caution when handling, testing, and adjusting.**

TABLE OF CONTENTS

Section	Page
I	GENERAL INFORMATION.....1-1
	1-1. Introduction.....1-1
	1-4. Instruments covered by this Manual.....1-1
	1-9. Description.....1-2
	1-14. Equipment Required but not Supplied.....1-3
	1-16. Recommended Test Equipment.....1-3
	1-18. Specifications.....1-2
	1-20. Related Manuals.....1-4
II	INSTALLATION.....2-1
	2-1. Introduction.....2-1
	2-3. Initial Inspection.....2-1
	2-5. Installation.....2-1
	2-7. Memory Space Configuration Guide.....2-5
	2-8. Memory Space Configurations with 64151A Standard Memory Controller.....2-5
	2-9. Memory Space Configurations with the 64155 Wide Memory Controller.....2-6
	2-10. Operating Environment.....2-8
	2-16. Storage and Shipment.....2-9
III	OPERATION.....3-1
IV	PERFORMANCE VERIFICATION AND TROUBLESHOOTING.....4-1
	4-1. Introduction.....4-1
	4-5. Performance Verification.....4-1
	4-8. How to Run Performance Verification.....4-3
	4-13. How to Interpret Performance Verification.....4-7
V	ADJUSTMENTS.....5-1
VI	REPLACEABLE PARTS.....6-1
	6-1. Introduction.....6-1
	6-3. Abbreviations.....6-1
	6-5. Replaceable Parts List.....6-1
	6-7. Ordering Information.....6-2
	6-12. Direct Mail Order System.....6-2
	6-15. Exchange Assemblies.....6-2

TABLE OF CONTENTS (continued)

Section		Page
VII	MANUAL CHANGES.....	7-1
VIII	THEORY AND SCHEMATICS.....	8-1
	8-1. Introduction.....	8-1
	8-3. Logic Conventions.....	8-1
	8-4. Logic Levels.....	8-1
	8-5. Power Supplies.....	8-1
	8-7. Theory.....	8-1
	8-8. Overview.....	8-1
	8-15. Block Theory.....	8-2
	8-24. Mnemonics.....	8-5

LIST OF ILLUSTRATIONS

Figure	Title	Page
1-1.	Model 64161A/162A/163A Emulation Memory.....	1-0
1-2.	Emulation Subsystem.....	1-2
2-1.	Emulation Memory Installation.....	2-3
2-2.	Emulation Memory Installation with Analysis.....	2-3
2-3.	Address Range Jumper Installation.....	2-4
4-1	Processor Control Test Display.....	4-6
4-2.	Memory Test Display.....	4-9
4-3.	Performance Verification Overview Display.....	4-13
4-4.	System-Board Access Test Display.....	4-13
4-5.	Memory Mapper Test Display.....	4-14
4-6.	Memory Control Test Display.....	4-14
4-7.	Emulation Access Test Display.....	4-15
6-1.	Replaceable Parts Locator.....	6-6
8-1.	Emulation Subsystem.....	8-0
8-2.	Emulation Memory Block Diagram.....	8-3
8-3.	Model 64161A/162A/163A Component Locator.....	8-12
8-4.	Service Sheet 1.....	8-13
8-5.	Service Sheet 2.....	8-14

LIST OF TABLES

Table	Title	Page
2-1	Memory Installation Configuration #1.....	2-5
2-2	Memory Installation Configuration #2.....	2-6
2-3.	Memory Installation Configuration #3.....	2-7
2-4.	Memory Installation Configuration #4.....	2-8
4-1.	Option Test Softkey Definitions.....	4-2
4-2.	Data Failure Status Decoding.....	4-8
4-3.	Memory Test. Sample Error Code vs. RAM and Data Buffer Failure.....	4-8
6-1.	Reference Designators and Abbreviations.....	6-3
6-2.	Replaceable Parts List.....	6-4
6-3.	List of Manufacturers' Codes.....	6-5

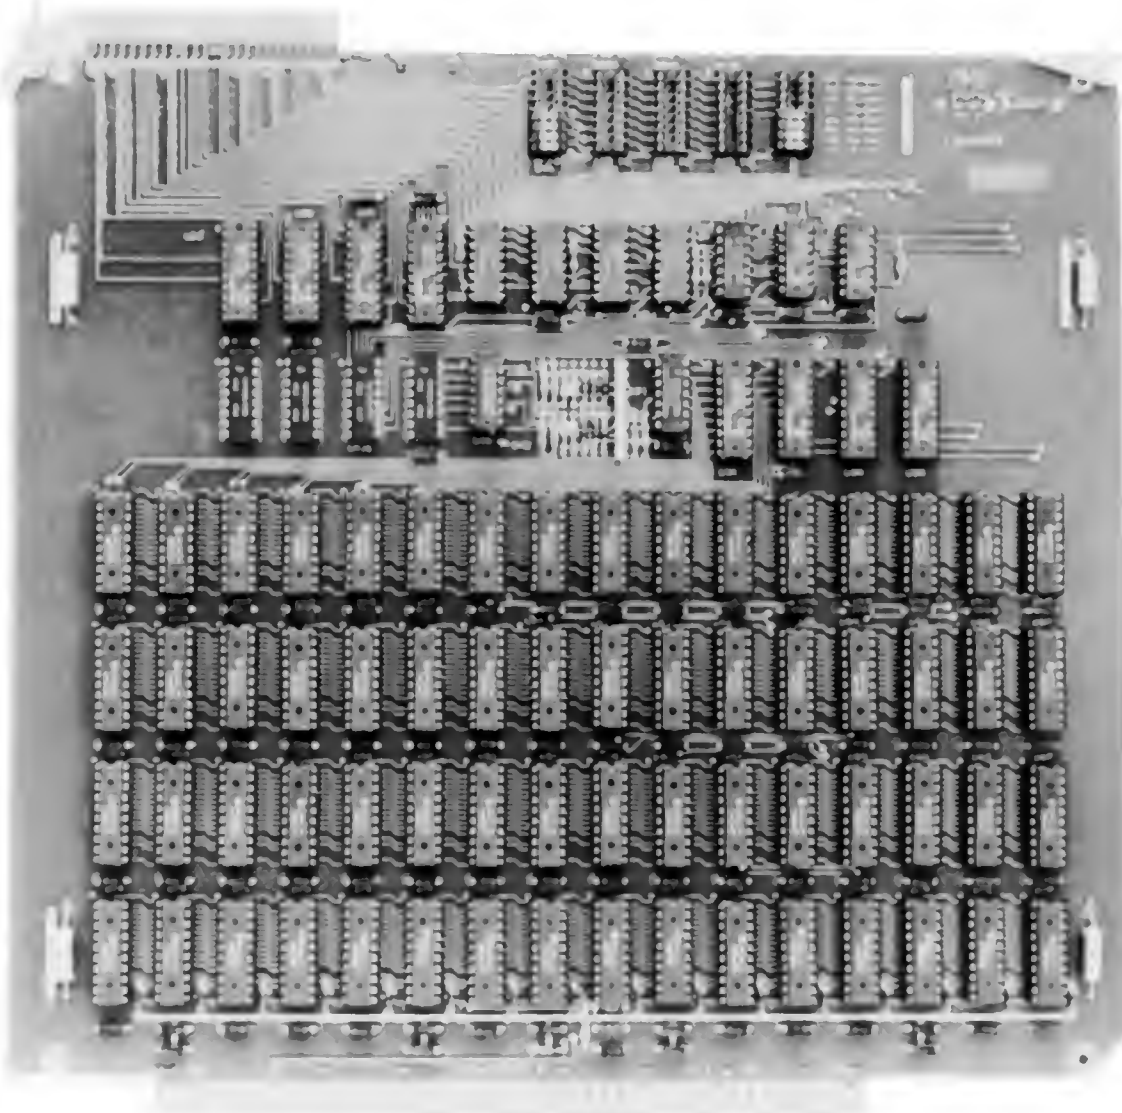


Figure 1-1. Model 64161A/162A/163A Emulation Memory

SECTION I

GENERAL INFORMATION

1-1. INTRODUCTION.

1-2. This Service Manual contains information required to install, test and service the Hewlett-Packard Model 64161A/162A/163A Emulator Memory.

Service information contained in this manual allows the user to isolate functional problems to the board level. This or to the component level. Board level troubleshooting is in support of the Hewlett-Packard Bluestripe board exchange program.

1-3. Shown on the title page is a microfiche part number. This number can be used to order a 4 X 6-inch microfilm transparency of the manual. Each microfiche contains up to 96 photoduplicates of the manual pages.

1-4. INSTRUMENTS COVERED BY THIS MANUAL.

1-5. Attached to the instrument or printed on the printed circuit board is the repair number. The repair number is in the form: 0000A0000. It is in two parts; the first four digits and the letter are the repair prefix, and the last five are the suffix. The prefix is the same for all identical instruments. The suffix, however, is assigned sequentially and is different for each instrument. The contents of this manual apply to instruments with the repair number prefix(es) listed under REPAIR NUMBERS on the title page.

1-6. An instrument manufactured after the printing of this manual may have a repair number prefix that is not listed on the title page. This unlisted repair number prefix indicates that the instrument is different from those described in this manual. The manual for this newer instrument is accompanied by a Manual Changes Supplement. The supplement contains "change information" that explains how to adapt the manual for the newer instrument.

1-7. In addition to change information, the supplement contains information for correcting errors in the manual. To keep this manual as current as possible, Hewlett-Packard recommends that you periodically request the latest Manual Changes Supplement. The supplement for this manual is identified with the manual print date and part number, both of which appear on the manual title page. Complimentary copies of the supplement are available from Hewlett-Packard.

1-8. For information concerning a repair number prefix that is not listed on the title page or in the Manual Changes Supplement, call your nearest Hewlett-Packard office.

1-9. DESCRIPTION.

1-10. The 64000 microprocessor emulation systems, illustrated in Figure 1-2, allow software designers to develop and debug software modules for specific microprocessors. The emulation plug replaces the microprocessor physically in the target system permitting hardware in the emulation system to simulate the functions of the target microprocessor while driving target system hardware with the software being developed.

1-11. The emulation memory can be used to duplicate the target system memory. Address space can be allocated to target system RAM, target system ROM, emulation RAM, and emulation ROM, and illegal address space.

1-12. Models 64161A, 64162A, and 64163A Emulation Memory provide the possibility of up to 128K bytes of memory on one card. The three models differ from each other in the number of memory chips loaded on each board. The Model 64163A, 32k byte memory, has one 16-chip row of 16K x 1 static RAM chips loaded; Model 64162A, 64k byte memory, has two rows of chips loaded and the Model 64161A, 128k byte memory has four rows of chips.

1-13. The 64161A, 64162A and 64163A feature fast access time, low-power standby and operation modes, and the ability to access bytes as well as 16-bit words.

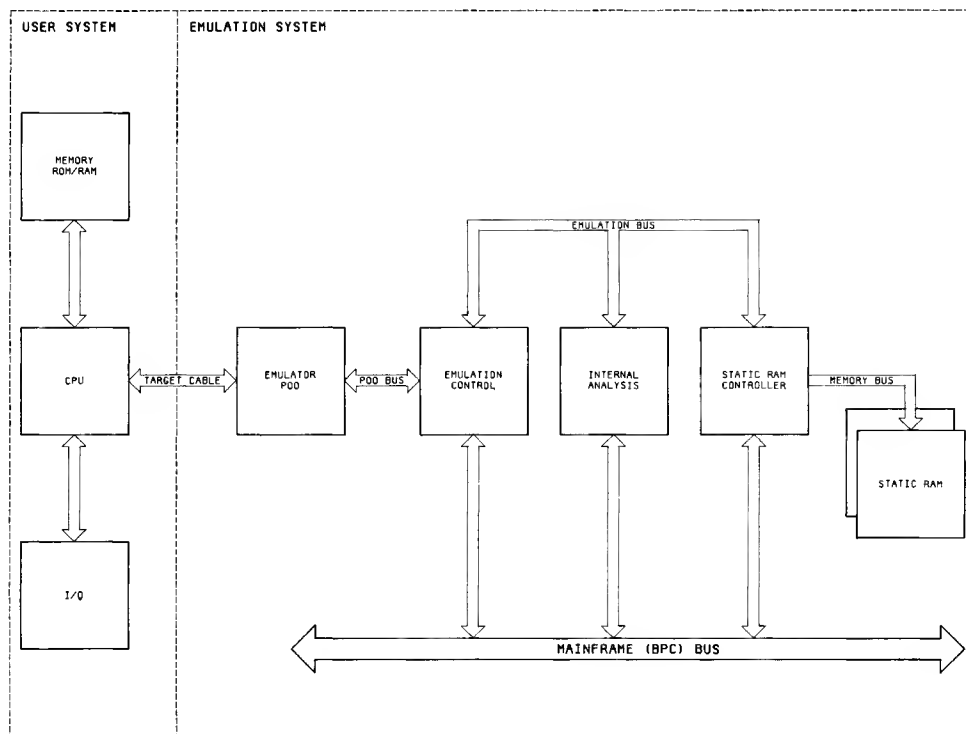


Figure 1-2. Emulation Subsystem

1-14. EQUIPMENT REQUIRED BUT NOT SUPPLIED.

1-15. A 64151 or 64155-66502 Memory Control Board is required to drive the 64161A, 64162A, or 64163A Emulator Memories.

1-16. TEST EQUIPMENT.

1-17. Table 1-1 lists the test equipment needed to repair and maintain Models 64161A/162A/163A.

Table 1-1

INSTRUMENT	RECOMMENDED MODEL	USE
Dual-trace Oscilloscope	HP1740A	Troubleshooting
Digital Voltmeter	HP3465A	Troubleshooting
64000 Extender Card	64100-66510	Troubleshooting
64000 Extender Cables (2)	8120-3350	Troubleshooting
Signature Analyzer	HP5004A, HP5005A	Troubleshooting
Memory Controller	HP64151A, HP64155	Troubleshooting

1-18. SPECIFICATIONS.

1-19. Specifications for the Model 64161A/162A/163A are listed in Table 1-2.

Table 1-2. Specifications.

	64161A	64162A	64163A
Power (Max Typ) mW			
0 rows selected	5283.7	5285.7	5285.7
1 row selected	8161.8	8163.7	8167.5
Current (Max Typ) mA			
0 rows selected	1056.7	1057.1	1057.9
1 row selected	1632.3	1632.7	1633.5

1-20. RELATED MANUALS.

1-21. Service Manuals.

64151A Memory Control Service Manual

64155 Memory Control Service Manual

64152A 32K Memory Service Manual

SECTION II

INSTALLATION

2-1. INTRODUCTION.

2-2. This section contains information for installing and removing the Model 64161A/162A/163A. Included are initial inspection procedures and instructions for repacking the instrument for shipment.

2-3. INITIAL INSPECTION.

2-4. Inspect the shipping container for damage. If the shipping container or cushioning material is damaged, it should be kept until contents of the shipment have been checked for completeness and the instrument has been checked mechanically and electrically. Procedures for checking electrical performance are given in Section IV. If the contents are incomplete, if there is mechanical damage or defect, or if the instrument does not pass the Performance Tests, notify the nearest Hewlett-Packard office. Keep the shipping materials for carrier's inspection. The HP office will arrange for repair or replacement at HP's option without waiting for claim settlement.

2-5. INSTALLATION.

NOTE

If the following installation procedures are not followed, imaging problems may result.

2-6. The Models 64161A/162A/163A Emulation Memory Boards are installed using the following procedure. Figures 2-1 and 2-2 shows the recommended location of the emulation option boards in the HP64000 mainframes for two typical configurations: Emulation Memory only and Emulation Memory with Analysis. Note that with emulators which use the 64271A or 64274A Control Card, an analyzer is required; therefore, ignore the configurations shown without an analyzer when installing these emulator control cards.

- a. Turn off power to the 64000 station.
- b. Loosen the two hold-down screws and remove the card cage access cover (64100A). (Refer to 64110A Mainframe Service Manual for information on removing the card cage access cover of the 64110A.)
- c. Install the emulation subsystem (control card and pod). Refer to the appropriate service manuals for the emulator concerned.

- d. If an analyzer module (64300A or 64302A) is to be used, install it at this time. Refer to the 64300A/64302A Service Manuals for installation instructions.
- e. Install the Memory Controller Module (64151A or 64155). Refer to the Service Manual for the Memory Controller in use for installation instructions. Do not install the Emulation Memory Boards or ribbon cables. This will be done later.
- f. The address range jumpers on the Emulation Memory Boards must now be configured to select the base address range of each Memory Board (64161A/162A/163A) used in the mainframe. The address range selection is dependent on the number of Memory Boards installed in the development station. Refer to Table 2-1 through 2-4 and Figure 2-3 for information on where jumpers should be installed.
- g. Once the address range jumper on each board is in the proper position, the Memory Boards must be installed in the development station. (Please refer to the Memory Space Configuration in the paragraphs beginning at 2-7 before installing your memory system.) Hold the board by the extractor levers, with the component side of the board facing the front of the development station, and the large motherboard connector (labeled "P1") pointing towards the bottom of the station. Insert the board in the guide rails of the desired slot and push down until the P1 connector seats firmly in the motherboard connector at the bottom of the station.
- h. Connect the Emulation Memory Bus ribbon cable across the left-hand set of edge connectors (as you face the front of the development station). The bus cables are keyed so that they will fit on the edge connectors in only one position.
- i. Connect the Emulation Bus cables across the two right-hand sets of edge connectors (as you face the front of the development station). The bus cables are keyed so that they will fit on the edge connectors in only one position.
- j. Reinstall the card cage access cover and tighten the 2 screws (64100A). (Refer to the 64110A Mainframe Service Manual for information on replacing the card cage access cover of the 64110A.)

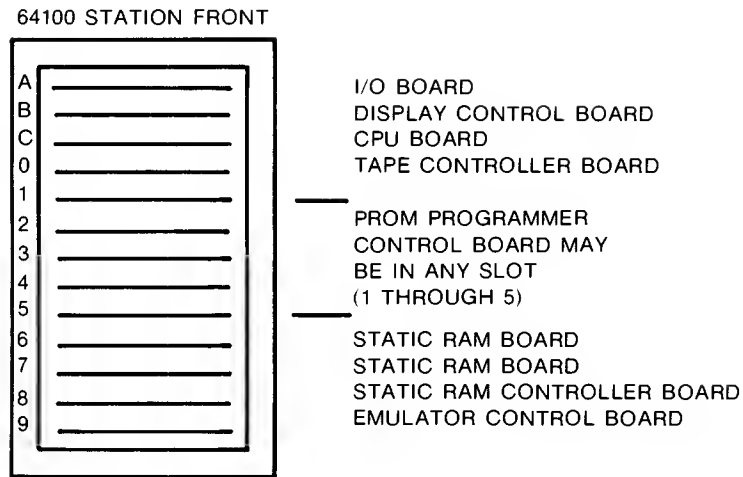


Figure 2-1. Emulation Memory Installation
(with 6416X series memory only)

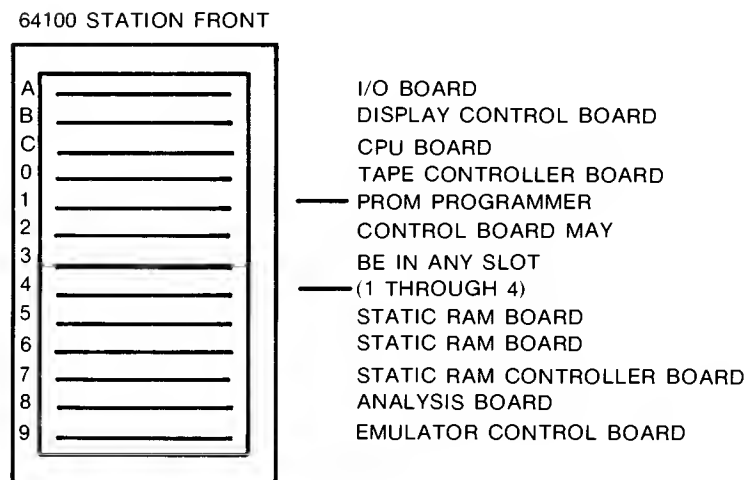
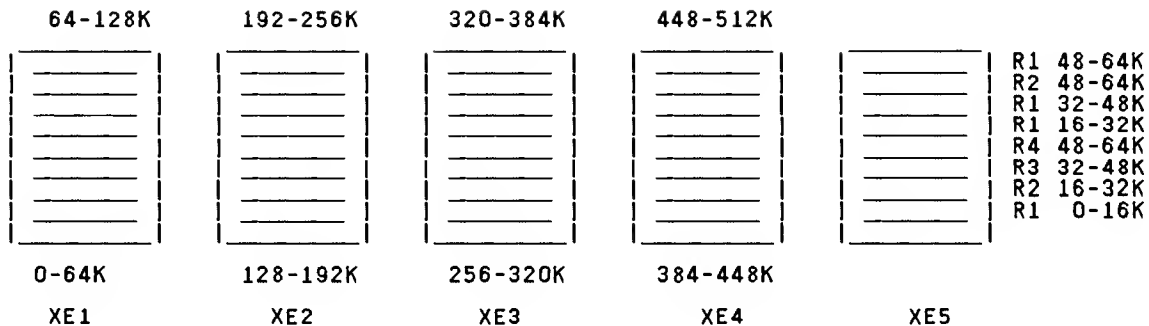


Figure 2-2. Emulation Memory Installation with Analysis



XE1-4 determine the addressable range of the Memory Card. The primary purpose for XE5 is to configure the 6416X series Memory to be compatible with the 6415X series Memory. XE5 performs row mapping. The following guidelines will help you avoid memory mapping errors.

When using 6416X series Memory Cards only.

1. The memory space defined by the 8-pin DIP jumper in XE1-4 may not overlap the address space assigned to any other memory card in systems using 64161A.
2. When using the 64161A the jumper in XE5 must be in the row 1-4.
3. When using a mixture of 64162A and 64163A cards the address space assigned in XE5 must not overlap when more than one card is assigned to the same address space in XE1-4.

When using a mixture of 6416X and 6415X Memory Cards.

1. When combining 6416X and 6415X Memory Cards you cannot assign address space higher than 64K words.
2. Be certain that the address space assigned to one card does not overlap the address space assigned to any other card.
3. Follow the configuration guides in Table 2-1 to Table 2-4.
Figure 2-3. Address Range Jumper Installation

2-7. MEMORY SPACE CONFIGURATION GUIDE

2-8. MEMORY SPACE CONFIGURATIONS WITH THE 64151A STANDARD MEMORY CONTROLLER

Model 64161A

64161A (128k bytes) cannot be attached to a 64151A memory controller that is attached to any of the 64152A/3A/4A or 64152B/3B/4B memory boards. A 64161A Memory Board must have an 8-pin DIP jumper in row 1-4 of XE5. Another 8-pin DIP jumper must be located in the 0-64k address range position in XE1.

Model 64162A

The 64162A (32K words) would normally be all the memory that could be used with the 64151A Memory Controller. Although the 64151A can be configured for 16 bit operation, the Model 64155A is usually recommended for 16 bit emulation. If your 16-bit emulation system permits the use of the 64151A Memory Controller, follow the configuration guide listed in Table 2-2 to expand to 64K words of memory.

Model 64163A

One of these boards may be attached to a Model 64151A along with one of the 64152/3/4 memory boards. If 6416X and 6415X memory boards are used together install the 6416X memory boards next to the 64151A Memory Controller. The 8-pin DIP jumper on the 64163A must be in XE1 in the position labeled 0-64K; the single jumper must be in XE5, in a position labeled R1. The address space of the 64152/3/4 memory boards being used must not overlap the address space assigned to the 64163A. Possible combinations of the 64163A and 64152/3/4 memory boards are listed in Table 2-1. Refer to Table 2-3 to assign address space to 64k word configurations when using the 64163A. The 8-pin DIP jumper must be in XE1, address range 0-64k on the 64162A board. The two single jumpers must be in XE5; one must be in a position labeled R1 and the other must be in a position labeled R2. The address space of R1 and R2 must not overlap. With 16-bit emulation two 64162A cards may be used.

Table 2-1.

	64163 row 1	64152/3/4
1	0-16K	16-32K
2	16-32K	0-16K

2-9. MEMORY CONFIGURATIONS WITH THE 64155A WIDE MEMORY CONTROLLER (with the 6416X memory you must use the 64155-66502 version)

Model 64161A

64161A (128k bytes) cannot be attached to a 64155A Memory Controller that is attached to any of the 64152/3/4 Memory Boards. A 64161A Memory Board must have a 8-pin DIP jumper in row 1-4 of XE5. Another 8-pin DIP jumper must be located in any one of the eight possible address range positions in XE1-XE4.

Model 64162A

The 64162A (64k bytes) can be used with a memory controller which has 64152A/64153A/64154A and/or 64152B/64153B/64154B Memory Boards. If 6416X and 6415X memory boards are used together DO NOT install the 6416X memory boards next to the 64155A Memory Controller. The 8-pin DIP jumper must be in XE1, address range 0-64k on the 64162A board. The two single jumpers must be in XE5; one must be in a position labeled R1 and the other must be in a position labeled R2. The address space of labels R1 and R2 must not overlap. The address space of the 64152/153/154 must not overlap the address space of the 64162A. A sample of address range configurations are listed in Table 2-2.

Table 2-2.

	64162		64152/3/4	64152/3/4
	row 1	row 2		
1*	0-16k	16-32k	32-48k	48-64k
2*	0-16k	48-64k	16-32k	32-48k
3+	16-32k	48-64k	0-16k	32-48k
4+	32-48k	16-32k	0-16k	48-64k
5+	32-48k	48-64k	0-16k	16-32k
6+	48-64k	16-32k	0-16k	32-48k

*In configuration 1 and 2 if there is only one 64152/3/4 it can occupy either address space listed for the 64152/3/4 boards.
+In configurations 3-6 there must be a block of memory with physical location at 0-16k; if there is only one 64152/3/4 it must be set to location 0-16k.

Model 64163A

One, two, or three of these boards can be attached to a memory control board along with three, two or one of the 64152/3/4 memory boards. If 6416X and 6415X memory boards are used together DO NOT install the 6416X memory boards next to the 64155 Memory Controller.

The 8-pin DIP jumper on the 64163A must be in XE1 in the position labeled 0-64k; Each board has a single jumper which must be put in a position labeled R1. If more than one of the 64163A Memory Boards are being used the address space of the R1 labels must not overlap.

The address space of the 64152/3/4 memory boards being used must not overlap the address space assigned to the 64163A memory boards being used. Possible combinations of 64152/3/4 memory boards and 64163A memory boards are listed in Table 2-3.

Table 2-3.

	64163 row 1	64152/3/4	64152/3/4	64152/3/4
1*	0-16k	16-32k	32-48k	48-64k
2+	16-32k	0-16k	32-48k	48-64k
3+	32-48k	0-16k	16-32k	48-64k
4+	48-64k	0-16k	16-32k	32-48
	64163 row 1	64163 row 1	64152/3/4	64152/3/4
5*	0-16k	16-32k	32-48k	48-64k
6*	0-16k	32-48k	16-32k	48-64k
7*	0-16k	48-64k	16-32k	32-48k
8+	16-32k	32-48k	0-16k	48-64k
9+	16-32k	48-64k	0-16k	32-48k
10+	32-48k	48-64k	0-16k	16-32k
	64163 row 1	64163 row 1	64163 row 1	64152/3/4
11	0-16k	16-32k	32-48k	48-64k
12	0-16k	32-48k	48-64k	16-32k
13	0-16k	16-32k	48-64k	32-48k
14+	16-32k	32-48k	48-64k	0-16k

*in configurations 1,5,6,7 if there is only one 64152/3/4 memory board it can occupy either address space listed for 64152/3/4 memory boards.

+in configurations 2-4,8-10, 14; there must be a block of memory located at 0-16k, so one of the 64152/3/4 memory boards must be set to location 0-16k.

Model 64162 with Model 64163

A combination of 64162A and 64163A boards may be attached to a memory controller with one 64152/3/4 memory board.

The 8-pin DIP jumper on the 64162 and the 64163 must be in the position 0-64k. For the two single jumpers of the 64162, one must be in a position labeled with R1 and the other must be in a position labeled with R2. The single jumper must be in a position labeled R1 on the 64163. The address spaces of the single jumpers must not overlap each other.

The address space assigned to each board must not overlap the address space assigned to any of the other boards.

Table 2-4

	64162		64163	64163
	row 1	row 2	row 1	row 1
1	0-16k	16-32k	32-48k	48-64k
2	0-16k	16-32k	48-64k	32-48k
3	0-16k	48-64k	16-32k	32-48k
4	0-16k	48-64k	32-48k	16-32k
5	16-32k	48-64k	0-16k	32-48k
6	16-32k	48-64k	32-48k	0-16k
7	32-48k	16-32k	0-16k	48-64k
8	32-48k	16-32k	48-64k	0-16k
9	32-48k	48-64k	0-16k	16-32k
10	32-48k	48-64k	16-32k	0-16k
11	48-64k	16-32k	0-16k	32-48k
12	48-64k	16-32k	32-48k	0-16k

2-10. OPERATING ENVIRONMENT.

2-11. The 64161A/162A/163A may be operated in environments within the following limits:

Temperature.....0°C to 40°C
 Humidity.....5 to 80% relative humidity at 40°C
 Altitude.....4 600 M (15 000 ft)

It should be protected from temperature extremes which cause condensation within the instrument.

2-12. STORAGE AND SHIPMENT.

2-10. Environment.

2-13. The 64161A/162A/163A may be stored or shipped in environments within the following limits:

Temperature.....-40°C to +75°C
Humidity.....5 to 80% relative humidity
Altitude.....15 000 m (50 000 ft)

2-14. Packaging.

2-15. Original Packaging. Containers and materials identical to those used in factory packaging are available through Hewlett-Packard offices. If the instrument is being returned to Hewlett-Packard for servicing, attach a tag indicating the type of service required, return address, model number, and full serial number. Also, mark the container FRAGILE to ensure careful handling. In any correspondence, refer to the instrument by model number and full serial number.

2-17. Other Packaging. The following general instructions should be used for repacking with commercially available materials:

- a. Wrap instrument in heavy paper or plastic. (If shipping to Hewlett-Packard office or service center, attach tag indicating service required, return address, model number, and full serial number.)
- b. Use strong shipping container. A double-wall carton made of 350-pound test material is adequate.
- c. Use a layer of shock-absorbing material 70 to 100 mm (3- to 4-inch) thick around all sides of the instrument to provide firm cushioning and prevent movement inside container.
- d. Seal shipping container securely.
- e. Mark shipping container FRAGILE to ensure careful handling.
- f. In any correspondence, refer to instrument by model number and full serial number.

SECTION III

OPERATION

Operation of the Model 64161A/162A/163A is beyond the scope of this manual. Emulation memory is an integral part of the emulation subsystem.

SECTION IV

PERFORMANCE VERIFICATION AND TROUBLESHOOTING

4-1. INTRODUCTION.

4-2. This section describes the Performance Verification for the Models 64161A/64162A/64163A Emulation Memory Boards.

4-3. This section is divided into two subsections: How to Run Performance Verification, and How to Interpret Performance Verification. Although the first subsection provides instructions on running several tests, only two tests will be described in the interpretation.

4-4. Use the following instructions to find the paragraphs which describe the Performance Verification of your system.

a. Be certain that your Memory subsystem is installed according to the directions in Section II.

b. For a system that is configured with a 64151A Memory Control Board.

4-9. How to Run Performance Verification

4-15. How to Interpret Performance Verification

c. For a system that is configured with a 64155 Memory Control

4-12. How to Run Performance Verification with a mixture of 6416X and 6415X Memory Boards.

4-12. How to Run Performance Verification with only 6416X memory boards.

4-20. How to Interpret Performance Verification.

4-5. PERFORMANCE VERIFICATION.

4-6. The Performance Verification for the Models 64161A/64162A/64163A Emulation Memory is a subset of the 64000 system opt_test Performance Verification. The opt_test Performance Verification tests all possible option modules that can be configured within the expansion slots of the 64000 mainframe. Table 4-1 defines the softkey options available.

4-7. The scope of the Performance Verification procedures in this section is to provide the minimum amount of information necessary to completely verify the operation of the Emulation Memory Boards. Procedures for complete verification of the Emulation Memory subsystem are treated in the Service Manuals for the Emulation Memory Controllers and are not repeated here (although the user may be referred to these manuals while using the Performance Verification procedures).

Troubleshooting of the analyzer may be carried out to the component level, as described in this section, or to the module level. Although not specifically described in this section, module level repair simply involves replacement of the analyzer board if any of the performance verification tests fail. Module level repair is supported by the Hewlett-Packard Bluestripe exchange program.

Table 4-1. Option Test Softkey Definitions

<end>	Causes the test currently executing to abort and returns to the overview menu.
<cycle>	Causes the performance verification software to test each block of memory in turn, stepping to the next block as the testing of each block is completed.
<next_test>	Causes the inverse video bar to move highlighting the address range of the next block of emulation memory to be tested.
<start>	Causes the performance verification software to begin testing emulation memory in the address range currently highlighted by the inverse video bar.
<print>	Causes the performance verification test results (the area above the status line on the display) to be copied to the system printer, if one is connected.
<prev_test>	Causes the inverse video bar to highlight the address range immediately prior to the one currently highlighted. Used to select a desired block of memory for testing.
<img_test>	Causes image testing to be commenced on the block of memory whose address range is highlighted by the inverse video bar on the display. Used to check for address line problems.
<retn_test>	Causes the Performance Verification software to initiate the retention testing sequence, which is used to verify that the static RAM will hold a "0" or "1" for a certain amount of time.
<print>	Causes the test results above the status line to be copied to the system printer if one is connected.

4-8. HOW TO RUN PERFORMANCE VERIFICATION.

4-9. Memory PV With Model 64151A Memory Controller.
(Configured in an 8-bit mode)

4-10. To run Performance Verification for the Emulation Memory Boards when a Model 64151A is being used as the emulation controller, use the following procedure:

- a. Disconnect the target system.
- b. Install the Emulation Memory subsystem in the HP 64000 development station. Refer to Section II of this manual for installation instructions. NOTE: FOR PERFORMANCE VERIFICATION--IF YOU ARE USING A COMBINATION OF 6416X AND 6415X MEMORY BOARDS ONE OF THE 6416X MEMORY BOARDS MUST BE INSTALLED NEXT TO THE 64151 MEMORY CONTROLLER.
- c. With the operating system initialized and awaiting a command , manually type or use the softkey:

```
opt_test      RETURN
<slot #> (of 64151A)  RETURN
<next_test>  (until inverse video bar highlights the
               Processor Control Test)
<start>
<cycle>
```

This will test all available blocks of emulation memory.
NOTE: If emulation memory is unavailable in any particular address range, then "FFFF" will be displayed as the status; however, "# of fails" will be displayed as a "0".

- d. If all available blocks of emulation memory test correctly, then the Emulation Memory Boards function correctly. It is then advisable to proceed with the remainder of the Emulation Memory subsystem testing as outlined in the appropriate Emulation Memory Controller Service Manual.

4-11. Memory Performance Verification with Model 64155A Memory Controller.

4-12. The following instructions cover Performance Verification for the Memory Controller and the Memory Boards. Only the "Memory Test" is described in this manual (paragraph 4-20). If the other tests fail, please refer to the 64155A Memory Control Service Manual. To run Performance Verification for the Emulation Memory Boards when a Model 64155A is being used as the Emulation Memory Controller, proceed as follows:

Running PV with a mixture of 6415X and 6416X memory boards.

- a. Disconnect the target system.
- b. Install the Emulation Memory subsystem in the HP64000 development station. Refer to Section II of this manual for installation instructions. NOTE: WHEN USING BOTH 6416X SERIES MEMORY AND 6415X MEMORY IN AN EMULATION SUBSYSTEM THE 6416X MEMORY BOARDS MUST NOT BE INSTALLED IN AN OPTION SLOT ADJACENT TO THE MODEL 64155 MEMORY CONTROLLER.

Running PV with 6416X Memory Boards only.

- a. Disconnect the target system.
- b. Install the Emulation Memory subsystem in the HP64000 development station. Refer to Section II of this manual for installation instructions. NOTE: FOR PERFORMANCE VERIFICATION--THE 6416X MEMORY BOARD MUST BE INSTALLED IN A SLOT ADJACENT TO THE MEMORY CONTROLLER.

The following steps are identical for any memory board configuration with the 64155A Memory Controller.

- c. With the operating system initialized and awaiting a command, manually type or use the softkey:

```
opt_test    RETURN
<slot #> (for 64155A) RETURN
select the memory range *
```

*select the maximum memory range in "K words" of the memory boards being tested. For example, if the highest memory range of the boards being tested is 256K-320K (as indicated by the jumper located in XE1,XE2,XE3,XE4) depress the softkey corresponding to that range. When using a mixture of 6416X and 6415X memory always select 0-64k. It is not necessary to RETURN.

```
<next_test> (until inverse video bar highlights the  
              "System->Board Access Test")  
<select>
```

This will display the "System->Board Access Test"

```
<cycle>
```

Cycle through the test several times. If no failures occur, press the <end> softkey which will return the display to the Memory Performance Verification overview menu.

```
<next_test> (until inverse video bar highlights the  
              "Memory Mapper" test)  
<select>
```

This will display the "Memory Mapper" test.

```
<cycle>
```

Cycle through the Memory Mapper test sequence several times. If no failures occur, press the <end> softkey to return to the Memory PV overview menu.

```
<next_test> (until inverse video bar highlights "Memory  
              Control" test)  
<select>
```

This will display the "Memory Control" test.

```
<cycle>
```

Cycle through the "Memory Control" test several times. If no failures occur, press the <end> softkey to return to the Memory PV overview menu.

```
<next_test> (until inverse video bar highlights "Memory  
              Test")  
  
<select>
```

This will display the "Memory Test"

```
<cycle>
```

NOTE: if emulation memory is unavailable in any particular address range, then "FFFF" will be displayed as the status; however, "# of fails" will be displayed as a "0".

Allow the "Memory Test" to cycle through the test several times. This will test all available blocks of memory up to the limit specified when the address range was selected. If desired, each individual block may also be tested for possible imaging problems and data retention failures by moving the highlighted inverse video bar to the desired block of memory with the <next_test> and <prev_test> keys, then pressing the <img_test> or <retn_test> softkeys to perform the necessary tests.

If all available blocks of memory test with no failures, then the Emulation Memory Boards work correctly. It is advisable to proceed with the remainder of the Emulation Memory Subsystem testing as outlined in the Emulation Memory Controller Service Manual.

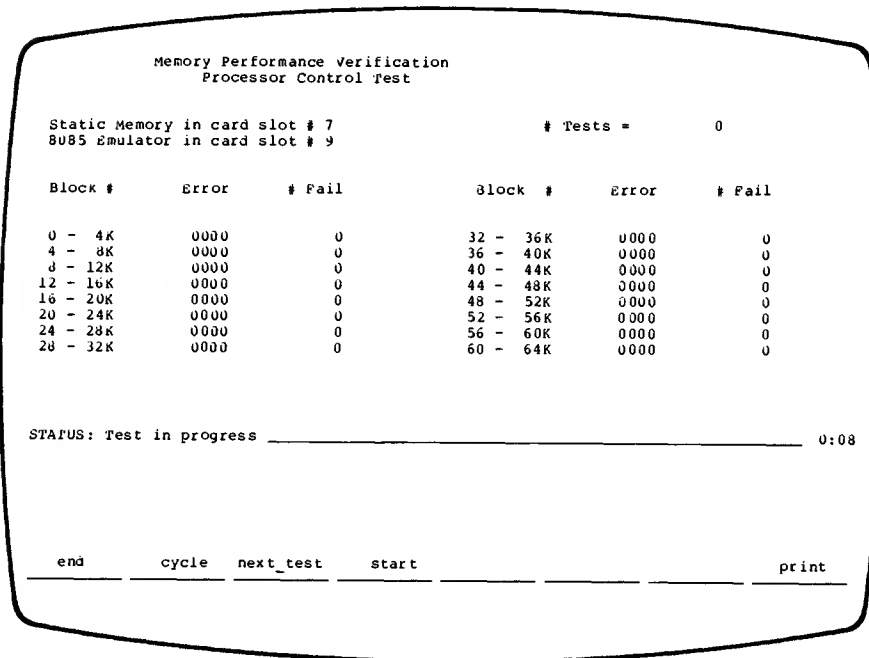


Figure 4-1. Processor Control Test Display.

4-13. HOW TO INTERPRET PERFORMANCE VERIFICATION.

4-14. Theory of Operation for the Memory Performance Verification is treated on a software test/results interpretation basis only; and is treated separately for Emulation Memory Boards driven by the 64151A and 64155 Emulation Memory Controllers.

4-15. Model 64151A/Emulation Memory--Processor Control Test.

4-16. Purpose--verifies that all the memory cells in a selected row can be written with random data patterns and that the data written can be read back correctly.

4-17. How--The Mainframe CPU initializes the Memory Controller Board and programs the memory mapper. Random data is then written to the first cell in the selected row of memory (a row is 16K deep by 16 bits wide). The data just written to this cell is immediately read back and compared with that written. The process then continues with each cell in turn. At the end of this process, the entire row of memory is read back and checked to verify that no RAM cells were overwritten by an address imaging problem (image testing is described further in the following paragraph). Errors are logged in a cumulative fashion to the status display.

4-18. Results--if no failures occur in the tested block of memory, the # fails indicator will be left at "0" and the "Error" message will display 0000 (hexadecimal), opposite the address range information for the selected block. However, if failures do occur in the tested block of memory, the # fails indicator will be incremented for each time that the test is run, and the "Error" message of 0000H will be replaced with a hexadecimal status message that indicates the position of the failing data bits. A "one" is placed in the status message for every data bit that is failing. To decode the status message, use the Table 4-1.

4-19. Because the memory is tested in 4K blocks and each IC is 16k long, imaging of 4K block sections is tested. The upper two address bits (A13, A12) are represented in the line "Image Errors" X1X2. If X1 is a "1" A13 is bad, if X0 is "1" A12 is bad.

Performance Verification Model 64161A/162A/163A

Table 4-2. Data Failure Status Decoding

XXXX	=	0000	0000	0000	0000	
		----	----	----	---1	D0
		----	----	----	--1-	D1
		----	----	----	-1--	D2
		----	----	----	1---	D3
		----	----	---	1	D4
		----	----	--1-		D5
		----	----	-1--		D6
		----	----	1---		D7
		----	---	1		D8
		----	--1-			D9
		----	-1--			D10
		----	1---			D11
		---	1			D12
		--1-				D13
		-1--				D14
		1---				D15

Table 4-3.

ERROR CODE		1				C				0				7			
BINARY		0	0	0	1	1	1	0	0	0	0	0	0	1	0	0	1
1	0-16 16-32 32-48 48-64	U7P U7Q U7N U7M				U7L U7K U7J U7I				U7H U7G U7F U7E				U7D U7C U7B U7A			
2	16-32 48-64	U6P U6Q U6N U6M				U6L U6K U6J U6I				U6H U6G U6F U6E				U6D U6C U6B U6A			
3	32-48	U5P U5Q U5N U5M				U5L U5K U5J U5I				U5H U5G U5F U5E				U5D U5C U5B U5A			
4	48-64	U4P U4Q U4N U4M				U4L U4K U4J U4I				U4H U4G U4F U4E				U4D U4C U4B U4A			
ROW	ADDRESS RANGE																
DATA BITS		D15 D14 D13 D12				D11 D10 D9 D8				D7 D6 D5 D4				D3 D2 D1 D0			
DATA BUFFERS		U3N				U3M				U3L				U3K			
		UPPER BYTE								LOWER BYTE							

4-20. Memory Test with the 64155 Controller.

4-21. Purpose--Verifies that all memory cells in the selected row can be written with random data patterns and that the data written can be read back correctly. If desired, the test can also verify that no address imaging problems exist, and that the RAM cells can retain data for a certain amount of time.

4-22. What--Each possible test is described in the paragraphs below.

- a. Memory Test. The Mainframe CPU initializes the Memory Controller Board and programs the memory mapper. Random data is then written to the first cell in the selected row of memory (a row is 16K deep by 16 bits wide). The data just written to this cell is immediately read back and compared with that written. The process then continues with each cell in turn. At the end of this process, the entire row of memory is read back and checked to verify that no RAM cells were overwritten by an address imaging problem (image testing is described further in the following paragraph). Errors are logged in a cumulative fashion to the status display.
- b. Image Test. If the <img_test> softkey is pressed, the Performance Verification software initiates image testing of the selected row of RAM. This testing checks for open or shorted address lines. The reasons for and process of image testing are best explained by examining the case of an 8 X 1 RAM device.

Memory Test						
# Tests = (0) (on indicated memory block)						
Memory Board	#Tests	# Fail	Mem. Block	Bit Failure (cum.)	#fail	
> 0 - 64K	0	0	:	> 0 - 16K	0000 (0000)	0
64 - 128K			:			
128 - 192K			:	16 - 32K	0000 (0000)	0
192 - 256K			:			
256 - 320K			:	32 - 48K	0000 (0000)	0
320 - 384K			:			
384 - 448K			:	48 - 64K	0000 (0000)	0
448 - 512K			:			
Image/Retention Test Results: First Location To Fail - (____)						
Data Bits To Fail - (____)						

Figure 4-2. Memory Test Display

Suppose we proceed to image test the RAM, and there are no address line problems or other problems associated with the RAM. We would proceed with image testing the Most Significant address line of the RAM by pulling it low, then high, while incrementing the least significant address bits. Note that at the same time that the most significant address bit is changed, we also change the data written into the RAM from a "0" to a "1". The loaded RAM appears as follows:

8 x 1 RAM	
ADDRESS	DATA
000	0
001	0
010	0
011	0
100	1
101	1
110	1
111	1

If the data is now read back, and there are no address line problems, then the correct data is interpreted as coming from each location.

Now let's examine the same situation, but with a different twist. We're still testing the most significant address bit for an imaging problem, but this time, it's not making contact with the address input of the RAM because of a bad socket (or for whatever other reason). Note: it is important to remember that unconnected inputs in TTL and MOS generally float to the high state. When we try to load the first four locations, here's what happens:

8 x 1 RAM	
ADDRESS	DATA
000	x
001	x
010	x
011	x
100	0
101	0
110	0
111	0

No data is loaded into the first four locations because the most significant address line could not be pulled low.

Instead, the 0's are loaded into the next four locations because the most significant address bit floats to the high state. When the next four locations are loaded the results are as follows:

8 x 1 RAM

ADDRESS	DATA
000	x
001	x
010	x
011	x
100	1
101	1
110	1
111	1

Notice that the 1's are loaded into the correct locations, because the MSB address line has floated high, however, they overwrite the 0's that were written earlier.

What happens now? When the performance verification software attempts to read the RAM back, it will begin by attempting to read locations 000-011, at which it tried to store 0's. However, since the most significant address line is open, it reads back the 1's that were stored at 1000-111--which is the "image" of the lower address range. The 1's were not the correct response; therefore, an error message is displayed for locations 000-011. To troubleshoot this type of failure, the technician only needs to determine which address line would have to be open to cause one set of addresses to fail and another set of addresses to pass.

- c. Retention Test. This test checks the ability of each RAM cell to hold data for a defined length of time. To do this, the mainframe CPU writes 0's to every location in memory, waits 60 seconds, then reads every location back. The process is repeated by writing 1's to all locations, then reading the locations back after approximately 60 seconds. As soon as a failure is detected in either test, the testing is aborted.

4-23. Results.

- a. Memory Test. If no data failures are encountered during testing of the selected 64K address range, then the "#FAIL" status is left at 0. This information is displayed on the left hand side of the screen. If failures occur during the course of the test, then "# FAIL" status is incremented once for every time the test is run. The right side of the display divides each 64K memory block

into four 16K blocks which correspond to the four rows of memory chips. The "BIT FAILURE" status will display a hexadecimal status message indicating the position of the failing bits. To interpret the status message refer to Table 4-x.

- b. Image Test. If no failures are found during the image testing, then the "First Location to Fail" status and the "Data Bits to Fail" status will be left blank. These status lines are located directly across from the "Image/Retention Test Results" line on the display. If a failure is encountered during the course of the image testing, then the blank "First Location to Fail" status will be replaced by a hexadecimal status message which shows the address of the first failure location; and the "Data Bits to Fail" status will be replaced by a hexadecimal status message which shows the data bits which failed at that locations. For information on decoding the data status, refer to Table 4-x.
- c. Retention Test. If no failures are found during the retention testing, then the "First Location to Fail" status and the "Data Bits to Fail" status will be left blank. These status lines are located directly across from the "Image/Retention Test Results" line on the display. However, if a failure is encountered during the retention testing, then the test aborts. The blank "First Location to Fail" status will be replaced with a hexadecimal status message which shows the address location of the memory cell that changed during the lag time between the write and the read; the "Data Bits to Fail" status will be replaced with a hexadecimal status message which shows the data RAM's that were unable to retain the information for the required length of time. For information on decoding the data status, refer to Table 4-1.

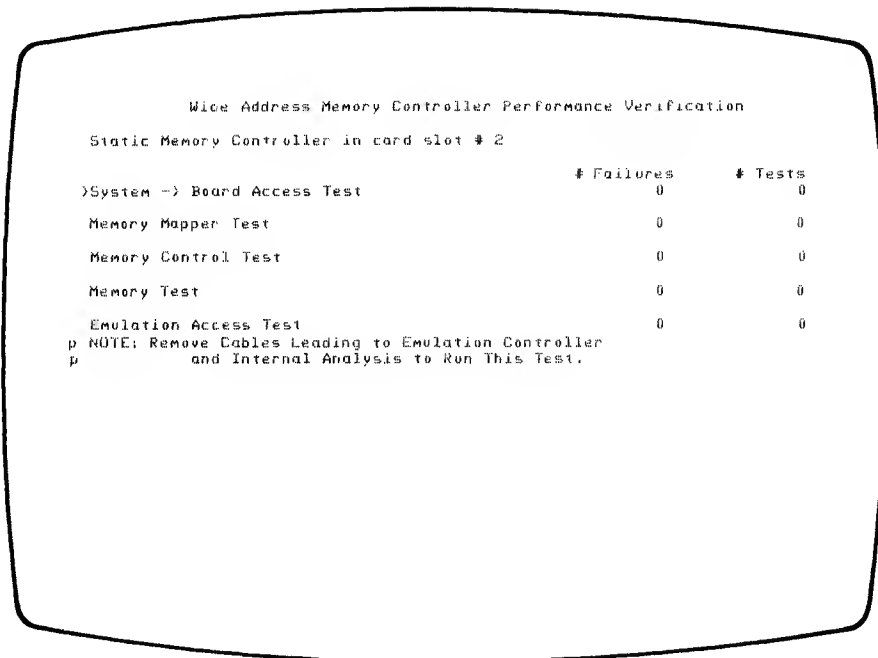


Figure 4-3. Performance Verification Overview Display

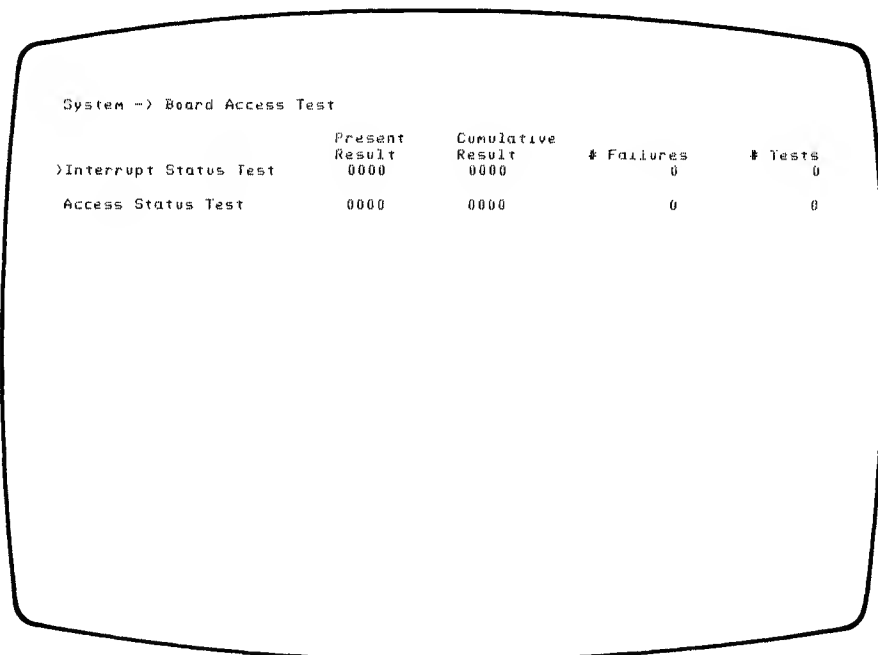


Figure 4-4. System-Board Access Test Display

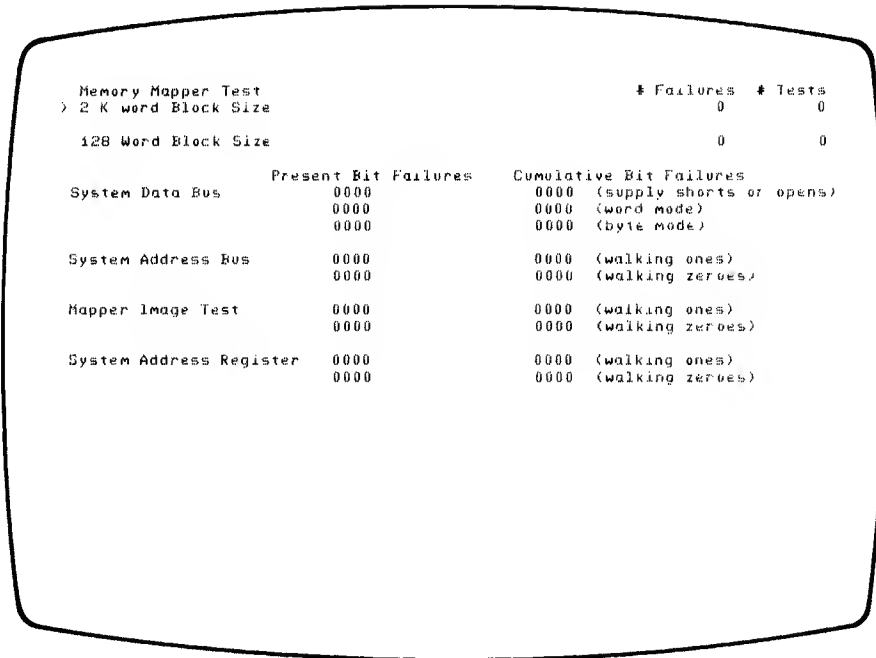


Figure 4-5. Memory Mapper Test Display

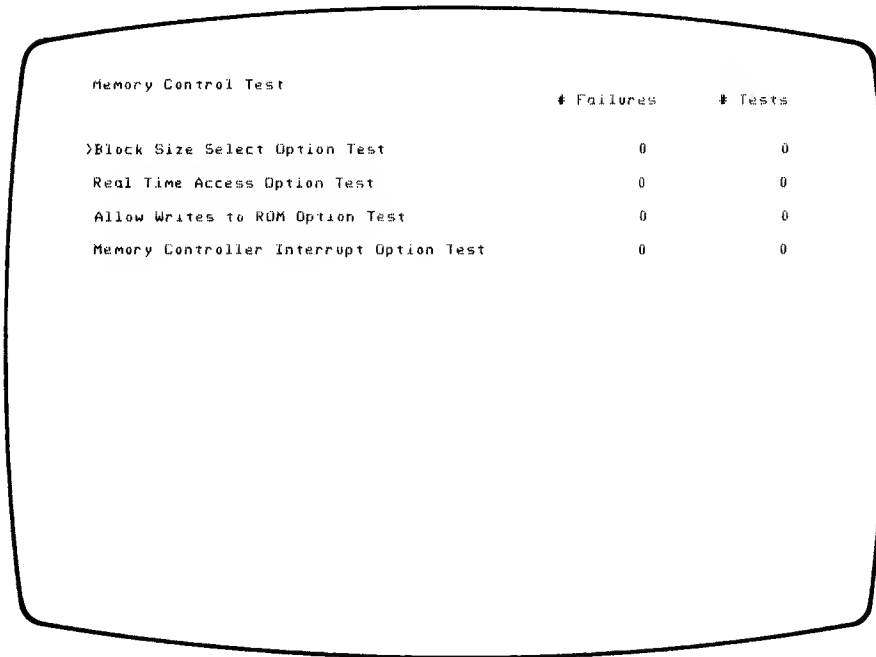


Figure 4-6. Memory Control Test Display

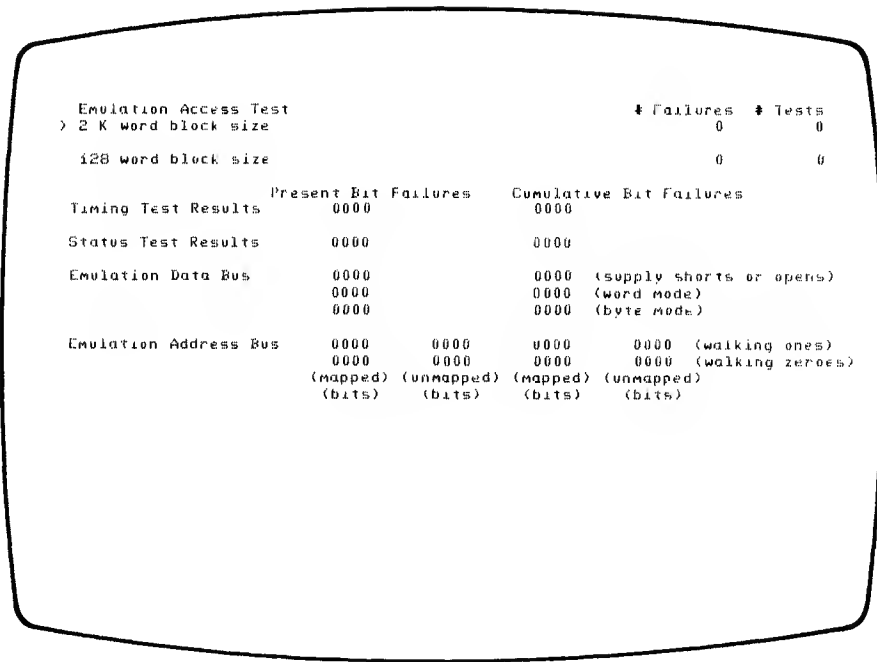


Figure 4-7. Emulation Access Test Display.

SECTION V

ADJUSTMENTS

Models 64161A/162A/163A Emulation Memory require no adjustments.

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering parts. Table 6-1 lists abbreviations used in the parts list and throughout the manual. Table 6-2 lists all replaceable parts in reference designator order. Table 6-3 contains names and addresses that correspond to the manufacturers' code numbers.

6-3. ABBREVIATIONS.

6-4. Table 6-1 lists abbreviations used in the parts list, the schematics and throughout the manual. In some cases, two forms of the abbreviations are used, one all in capital letters, and one partial or no capitals. This occurs because the abbreviations in the parts list are always all capitals. However, in the schematics and other parts of the manual, other abbreviation forms are used with both lower case and upper case letters.

6-5. REPLACEABLE PARTS LIST.

6-6. Table 6-2 is the list of replaceable parts and is organized as follows:

- a. Electrical assemblies and their components in alphanumerical order by reference designation.
- b. Chassis-mounted parts in alphanumerical order by reference designation.
- c. Miscellaneous parts.
- d. Illustrated parts breakdowns, if appropriate.

The information given for each part consists of the following:

- a. The Hewlett-Packard part number.
- b. The total quantity (Qty) in the instrument.
- c. The description of the part.
- d. A typical manufacturer of the part in a five-digit code.
- e. The manufacturer's number for the part.

The total quantity for each part is given only once--at the first appearance of the part number in the list.

6-7. ORDERING INFORMATION.

6-8. To order a part listed in the replaceable parts table, quote the Hewlett-Packard part number, indicate the quantity required, and address the order to the nearest Hewlett-Packard office.

6-9. To order a part that is not listed in the replaceable parts table, include the instrument model number, instrument serial number, the description and function of the part, and the number of parts required. Address the order to the nearest Hewlett-Packard Office.

6-10. SPARE PARTS KIT.

6-11. At this time no Spare Parts Kit is available for this instrument

6-12. DIRECT MAIL ORDER SYSTEM.

6-13. Within the USA, Hewlett-Packard can supply parts through a direct mail order system. Advantages of using the system are as follows:

- a. Direct ordering and shipment from the HP Parts Center in Mountain View, California.

- b. No maximum or minimum on any mail order (there is a minimum order amount for parts ordered through a local HP office when orders require billing and invoicing).

- c. Prepaid transportation (there is a small handling charge for each order).

- d. No invoices--to provide these advantages, a check or money order must accompany each order.

6-14. Mail order forms and specific ordering information is available through your local HP office. Addresses and phone numbers are located at the back of this manual.

6-15. EXCHANGE ASSEMBLIES

6-16. Exchange assemblies are available from the HP Corporate Parts center on a trade in bases. These exchange assemblies, are listed in Table 6-2.

Table 6-1. Reference Designators and Abbreviations

REFERENCE DESIGNATORS							
A	= assembly	F	= fuse	MP	= mechanical part	U	= integrated circuit
B	= motor	FL	= filter	P	= plug	V	= vacuum, tube, neon bulb, photocell, etc
BT	= battery	IC	= integrated circuit	O	= transistor	VR	= voltage regulator
C	= capacitor	J	= jack	R	= resistor	W	= cable
CP	= coupler	K	= relay	RT	= thermistor	X	= socket
CR	= diode	L	= inductor	S	= switch	Y	= crystal
DL	= delay line	LS	= loud speaker	T	= transformer	Z	= tuned cavity network
DS	= device signaling (lamp)	M	= meter	TB	= terminal board		
E	= misc electronic part	MK	= microphone	TP	= test point		
ABBREVIATIONS							
A	= amperes	H	= henries	N/O	= normally open	RMO	= rack mount only
AFC	= automatic frequency control	HDW	= hardware	NOM	= nominal	RMS	= root-mean square
AMPL	= amplifier	HEX	= hexagonal	NPO	= negative positive zero (zero temperature coefficient)	RWV	= reverse working voltage
BFO	= beat frequency oscillator	HG	= mercury	NPN	= negative-positive-negative	S-B	= slow-blow
BE CU	= beryllium copper	HR	= hour(s)	NRFR	= not recommended for field replacement	SCR	= screw
BH	= binder head	HZ	= hertz	NSR	= not separately replaceable	SE	= selenium
BP	= bandpass	IF	= intermediate freq			SECT	= section(s)
BRS	= brass	IMPG	= impregnated			SEMICON	= semiconductor
BWO	= backward wave oscillator	INCD	= incandescent			SI	= silicon
CCW	= counter-clockwise	INCL	= include(s)	OBD	= order by description	SIL	= silver
CER	= ceramic	INS	= insulation(ed)	OH	= oval head	SL	= slide
CMO	= cabinet mount only	INT	= internal	OX	= oxide	SPG	= spring
COEF	= coefficient	K	= kilo=1000			SPL	= special
COM	= common			P	= peak	SST	= stainless steel
COMP	= composition	LH	= left hand	PC	= printed circuit	SR	= split ring
COMPL	= complete	LIN	= linear taper	PF	= picofarads= 10 ⁻¹² farads	STL	= steel
CONN	= connector	LK WASH	= lock washar	PH BRZ	= phosphor bronze	TA	= tantalum
CP	= cadmium plate	LOG	= logarithmic taper	PHL	= phillips	TD	= time delay
CRT	= cathoda-ray tube	LPF	= low pass filter	PIV	= peak inverse voltage	TGL	= toggle
CW	= clockwise	M	= milli=10 ⁻³	PNP	= positive-negative-positive	THD	= thread
DEPC	= deposited carbon	MEG	= meg=10 ⁶			TI	= titanium
DR	= drive	MET FLM	= metal film	P/O	= part of	TOL	= tolerance
ELECT	= electrolytic	MET OX	= metallic oxide	POLY	= polystyrene	TRIM	= trimmer
ENCAP	= encapsulated	MFR	= manufacturer	PORC	= porcelain	TWT	= traveling wave tube
EXT	= external	MHZ	= mega hertz	POS	= position(s)	U	= micro=10 ⁻⁶
F	= farads	MINAT	= miniature	POT	= potentiometer	VAR	= variable
FH	= flat head	MOM	= momentary	PP	= peak-to-peak	VDCW	= dc working volts
FIL H	= fillister head	MOS	= metal oxide substrate	PT	= point	W/	= with
FXD	= fixed	MTG	= mounting	PWV	= peak working voltage	W	= watts
		MY	= "mylar"			WIV	= working inverse voltage
G	= giga (10 ⁹)	N	= nano (10 ⁻⁹)	RECT	= rectifier	WW	= wirewound
GE	= germanium	N/C	= normally closed	RF	= radio frequency	W/O	= without
GL	= glass	NE	= neon	RH	= round haad or right hand		
GRD	= ground(ed)	NI PL	= nickel plate				

Table 6-2. Replaceable Parts List

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1	64161-66501	8	1	BOARD ASSEMBLY-MEMORY 128K-NEW	28480	64161-66501
A1	64161-66501			128KB EMUL RAM PCA-EXCHANGE	28480	64161-69501
A1	64161-66501			64KB EMUL RAM PCA-EXCHANGE	28480	64161-69501
A1	64161-66501			32KB EMUL RAM PCA-EXCHANGE	28480	64161-69501
C1-C2	0160-5246	6	80	CAPACITOR-FXD .1 UF +80-20% 50 VDC CER	28480	0160-5246
C3-C4	0180-0229	4	4	CAPACITOR-FXD 22 UF +-10% 15 VDC TA	28480	0180-0229
C5-C62	0160-5246	6		CAPACITOR-FXD .1 UF +80-20% 50 VDC CER	28480	0160-5246
TP1-TP3	0360-0535	0	3	TERM TEST POINT	28480	0360-0535
R1-R2	0757-0280	3	6	RESISTOR 1K 1% .125W F TC=0+-100	28480	0757-0280
R3-R4	0698-3432	7	2	RESISTOR 26.1 1% .125W F TC=0+-100	28480	0698-3432
R5	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	28480	0757-0280
R6-R9	0757-0399	5	4	RESISTOR 82.5 1% .125W F TC=0+-100	28480	0757-0399
R10-R12	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	28480	0757-0280
XE1-XE5	1200-0607	0	5	SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
E1-E2	1251-4398	1	2	SHUNT DIP 4 POSITION; DUAL INLINE PKG	28480	1251-4398
RP1	1810-0275	1	1	NETWORK-RES 10-SIP 1.0K OHM X 9	28480	1810-0175
UR30-UR3F	1810-0600	6	4	NETWORK-RES 16-DIP 40.0 OHM X 8	28480	1810-0600
U2C	1820-1633	8		IC BFR TTL S INV OCTL 1-INP	01295	SN74S240N
U2D	1820-1633	8		IC BFR TTL S INV OCTL 1-INP	01295	SN74S240N
U2E	1820-1633	8		IC BFR TTL S INV OCTL 1-INP	01295	SN74S240N
U2F	1820-1633	8		IC BFR TTL S INV OCTL 1-INP	01295	SN74S240N
U2G	1820-2861	5	4	IC DCDR TTL F 3-TO-8 LINE 3-INP	07263	74F138PC
U2H	1820-2861	5		IC DCDR TTL F 3-TO-8 LINE 3-INP	07263	74F138PC
U2I	1820-2861	5		IC DCDR TTL F 3-TO-8 LINE 3-INP	07263	74F138PC
U2J	1820-2861	5		IC DCDR TTL F 3-TO-8 LINE 3-INP	07263	74F138PC
U2K	1820-2690	9	1	IC GATE TTL F OR QUAD 2-INP	07263	74F32
U2L	1820-1198	0	2	IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS03N
U2M	1820-1198	0		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS03N
U3G	1820-1204	9	1	IC GATE TTL LS NAND DUAL 4-INP	01295	SN74LS20
U3J	1820-2684	1	1	IC GATE TTL F NAND QUAD 2-INP	07263	74F00
U3K	1820-1633	8	8	IC BFR TTL S INV OCTL 1-INP	01295	SN74S240N
U3L	1820-1633	8		IC BFR TTL S INV OCTL 1-INP	01295	SN74S240N
U3M	1820-1633	8		IC BFR TTL S INV OCTL 1-INP	01295	SN74S240N
U3N	1820-1633	8		IC BFR TTL S INV OCTL 1-INP	01295	SN74S240N
U4A-U4P	1818-1969	8	64	IC CMOS F16384 (16K) STAT RAM 70NS	S4013	HM6167P
U5A-U5P	1818-1969	8		IC CMOS F16384 (16K) STAT RAM 70NS	S4013	HM6167P
U6A-U6P	1818-1969	8		IC CMOS F16384 (16K) STAT RAM 70NS	S4013	HM6167P
U7A-U7P	1818-1969	8		IC CMOS F16384 (16K) STAT RAM 70NS	S4013	HM6167P
E3,4	1258-0182	7	2	CONNRP IM PLUG	28480	1258-0182

See introduction to this section for ordering information

Table 6-3. List of Manufacturers' Codes

Mfr No.	Manufacturer Name	Address	Zip Code
00000 01295 07263 S4013	ANY SATISFACTORY SUPPLIER TEXAS INSTR INC SEMICOND CMPNT DIV FAIRCHILD SEMICONDUCTOR DIV HITACHI	DALLAS TX MOUNTAIN VIEW CA TOKYO JP	75222 94042

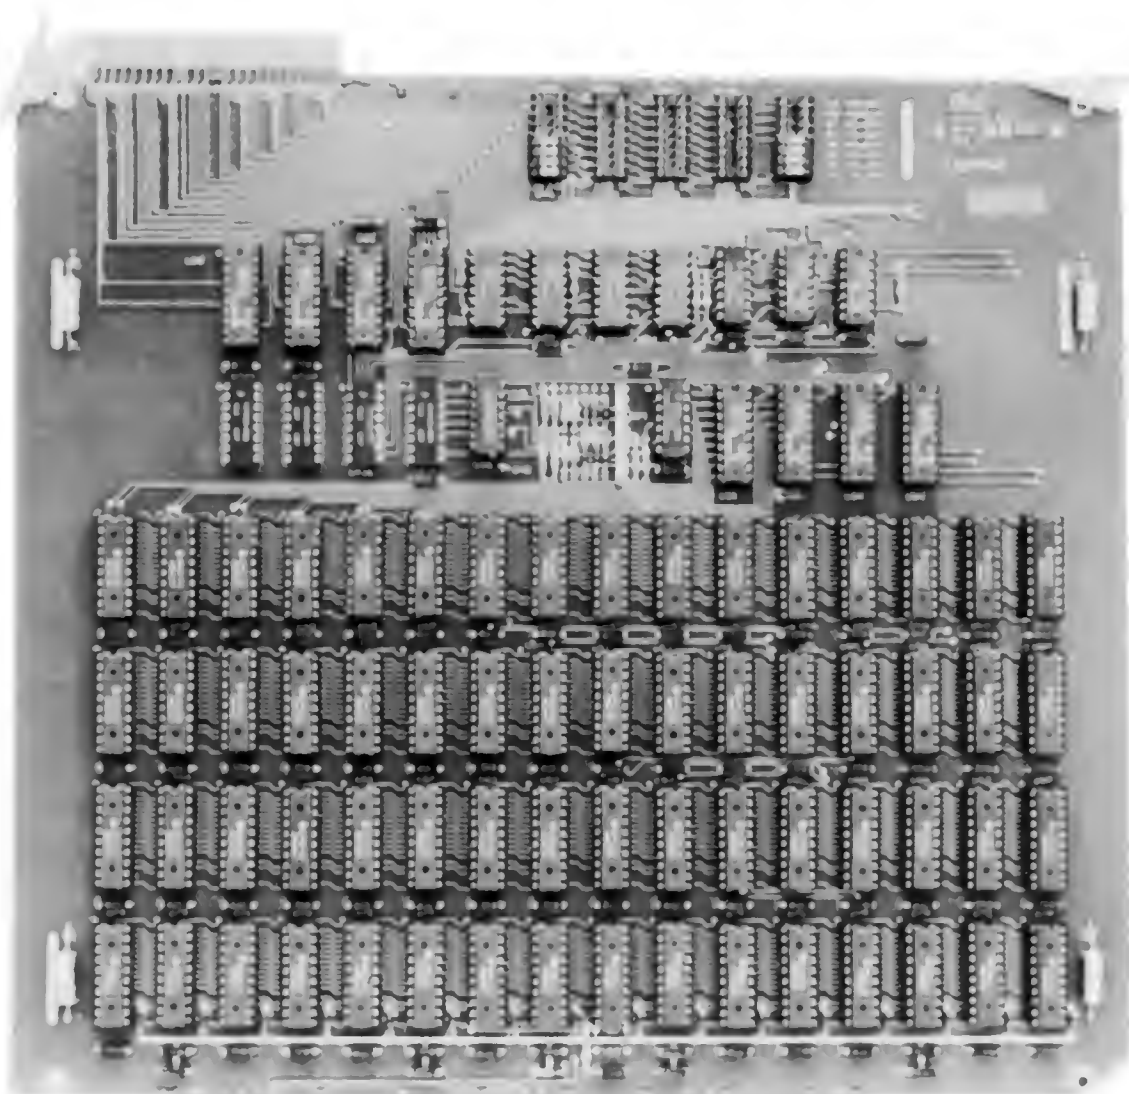


Figure 6-1. Replaceable Parts Locator

SECTION VII

MANUAL CHANGES

This section normally contains information for backdating this manual for models with repair numbers prior to the one shown on the title page. Because this edition includes the information for the first repair number there is no backdating material.

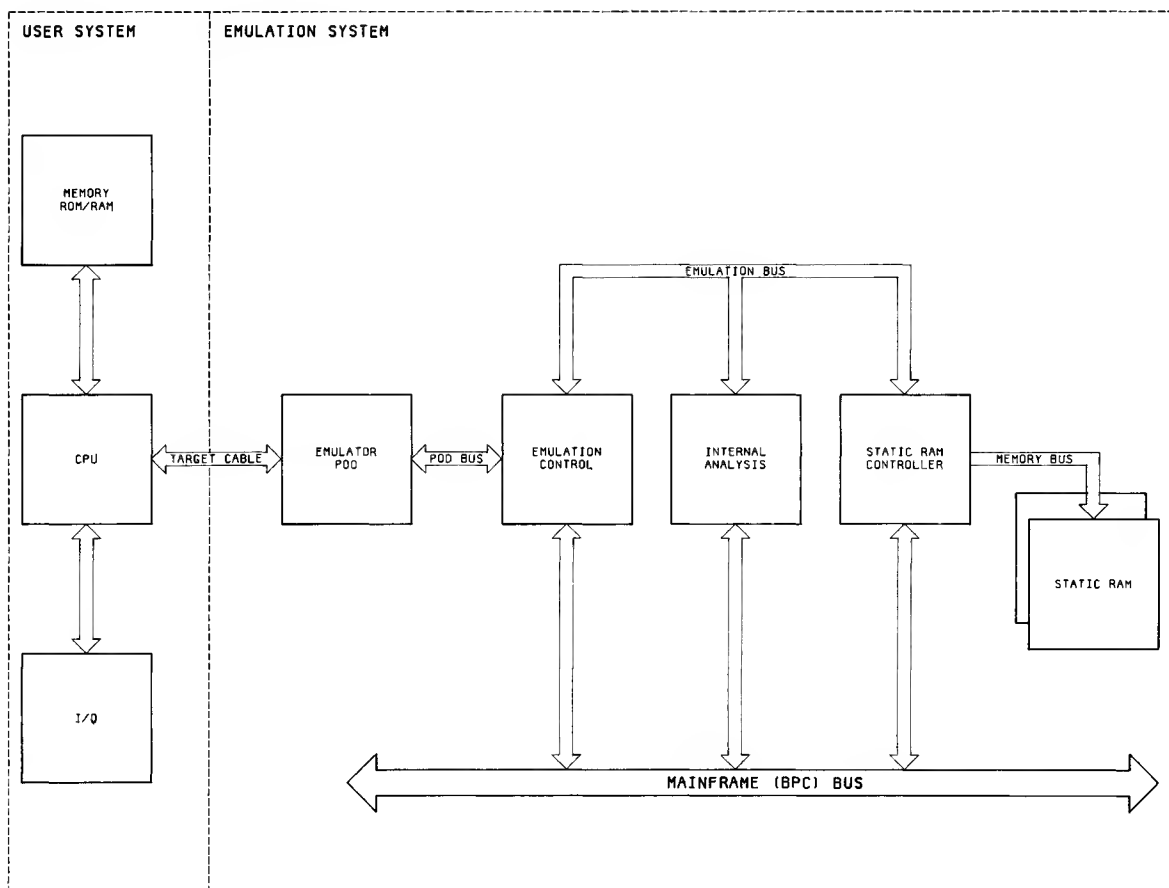


Figure 8-1. Emulation Subsystem

SECTION VIII

THEORY AND SCHEMATICS

8-1. INTRODUCTION.

8-2. This section contains block and component level theory and schematics for the 64161A, 64162A and 64163A Emulation Memories.

8-3. LOGIC CONVENTIONS. The positive logic convention is used for logic variables and circuits within the 64161A/162A/163A. Positive logic defines a "1" as the more positive voltage (high) and a "0" as the more negative logic (low).

8-4. LOGIC LEVELS. TTL high- 2.0 low 0.8

8-5. POWER SUPPLIES. The mainframe supplies +5 volts and +12 volts to the emulation memory for operating power.

8-6. The block diagram, schematic, component locator, and other service information are provided in foldout service sheets to help in servicing the emulation memory.

8-7. THEORY.

8-8. OVERVIEW.

8-9. The 64000 microprocessor emulation systems, illustrated in figure 1-2, allow software designers to develop and debug software modules for specific microprocessors. The emulation plug replaces the microprocessor physically in the target system permitting hardware in the emulation system to simulate the functions of the target microprocessor while driving target system hardware with the software being developed.

8-10. The emulation memory can be used to duplicate the target system memory. Address space can be allocated to target system EAM, target system ROM, emulation RAM, and emulation ROM, and illegal address space.

8-11. The Memory Controller is the interface between the emulation memory, the installed Emulator, and the 64000 operating system. This option also maps the users address received via the emulation bus into available emulation memory. The mapping process is performed by mapper RAM's which reside on the Memory Controller. A read/write operation to emulation memory is performed via the memory bus.

8-12. The mapper RAM's also output signals which specify what type of memory the given block of emulation memory is supposed simulate (RAM, ROM, or GUARDED Memory), or whether a given address is

to be regarded as user address space and not acted upon. The Memory Controller will also signal the analysis equipment and halt emulation when a GUARDED memory access is attempted and, if optionally configured, when a write to ROM is attempted.

8-13. When the 64161A/162A/163A Memory Boards are installed each Memory Board is hardwired with DIP jumpers to enable a specific memory range so that only one Memory Board will respond to each address.

8-14. The hardware on the Memory Boards simulates address decoder circuitry and some type of memory space which has been defined on the Memory Controller.

8-15. BLOCK THEORY.

8-16. The Model 64161A/162A/163A Block Diagram illustrates the three functional blocks of the memory board: decoder circuitry, address and data buffers, and the memory array. The decoder circuitry specifies the address range of the memory board, decodes the memory rows selected, produces a read enable signal and configures the 64162A and 64163A memory mapping to be compatible with 64152A, 64153A and 64154A memory boards. The address and data buffers drive the signals which are direct inputs to the RAM array.

8-17. U2G through U2J, ROW SELECT DECODERS, demultiplex the upper five address lines A14-A18 to select row numbers of the memory to be accessed. An 8-pin DIP jumper plugged into one of the sockets XE1-XE4 specifies the 64K word addressable range of the memory board.

8-18. The ADDRESS RANGE SELECT JUMPER, XE5 configures the 64162A and 64163A to be compatible with the 64152A, 64153A and 64154A memory boards. If the 64161A, 64162A, or 64163A are not combined with other memory boards an 8-pin DIP jumper should be plugged into the lower half of the socket. Please refer to Section II for complete information on the memory mapping configurations which are possible.

8-19. The network composed of R6-R9 and CR1,2,6,7 deselects the RAM array when the circuitry is powered up. Pulling the circuitry to +12 volts through RP1 brings the voltage in Row 1-4 up quickly when the system is powered on, and the zener diodes CR1,2,6,7 clamp the voltage at approximately +5 volts. This deselection process prevents the RAM array from drawing a large surge of current by putting the RAMs on their low power standby mode.

8-20. Whenever the ROW SELECT DECODERS pull one of the ROWs 1-4 low, the BOARD SELECT GATE, U3GB, produces HRDEN. The READ ENABLE GATE, U3JA, gates LWRT (high) and HRDEN to produce LRD.

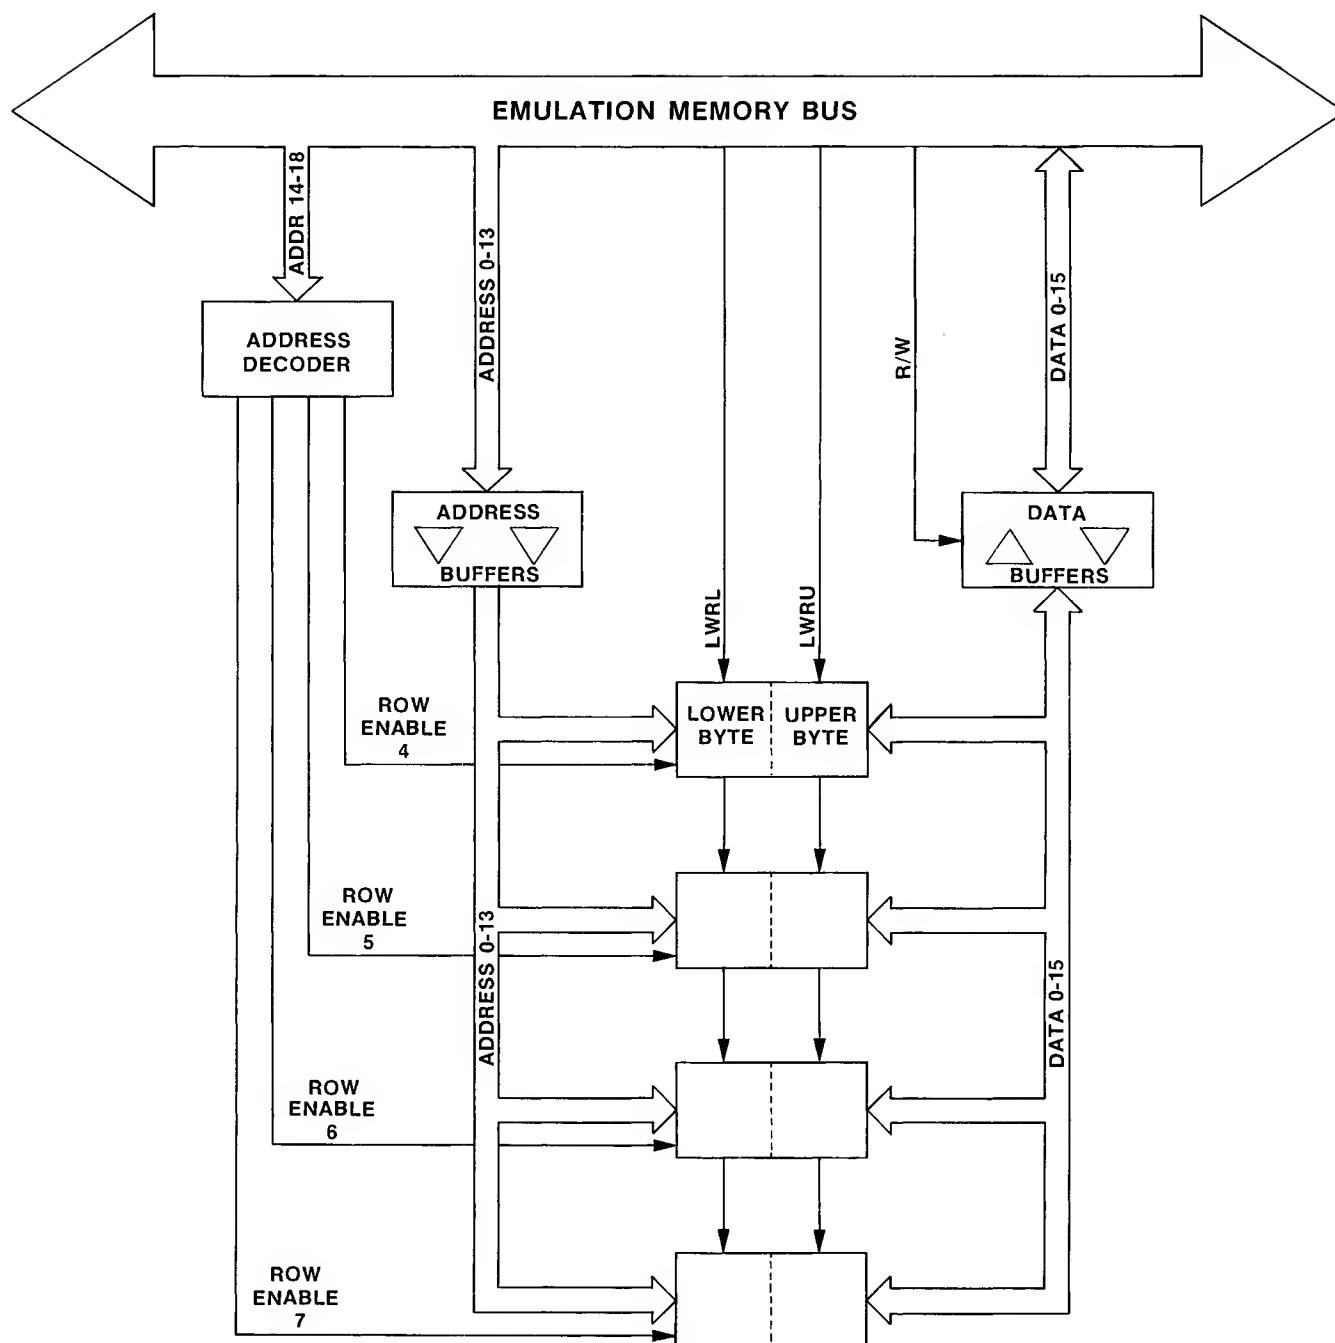


Figure 8-2. Emulation Memory Block Diagram.

8-21. From the Memory Controller on the Emulation Memory Bus the Memory Board receives 19 address lines, 16 data lines and three control lines. The 16 data lines and the lower 14 address lines are buffered through the DATA BUFFERS, U3K-U3N, and the ADDRESS BUFFERS, U2C-U2F, then used as direct inputs to the RAM array. CR11-26 and R12 form a pullup network for the data inputs to the RAMs. This guarantees that the proper voltage levels are applied to the RAM inputs during a write cycle so that correct data is written. LWRT is a directional control for the DATA BUFFERS. LWRL and LWRU enable the lower and/or upper bytes of the RAM array.

8-22. The RAM array consists of an upper byte and a lower byte, which may also be accessed as a single 16-bit word. The Hitachi 6167 16k x 1-bit static Rams feature 70 nsec access time, low power standby mode, low power operation and asynchronous operation.

8-23. Power and ground connections and an 8-bit I.D. signal are the only connections between the memory board and the mainframe. The codes produced by the EMULATION MEMORY BOARD ID CIRCUITRY are listed in Table 8-1.

Table 8-1. Memory Board ID Code.

CODE	# OF ROWS LOADED
01F8	4
01F9	2
01FA	1

8-24. MNEMONICS.

8-25. Signals in the 64161A/162A/163A/162A/163A have been assigned mnemonics which describe the active state and function of the signal line. A prefix letter (H, L, P, OR N) indicates the active state of the signal and the remaining letters indicate its function. An H prefix indicates that the function is active in the high state; an L prefix indicates that it is active in the low state. For devices that are edge sensitive the prefix "P" indicates that the function is active on the positive going edge; the prefix "N" indicates that the device is active on the negative going edge.

TO/FROM MEMORY CONTROLLER

LED0-15	LOW EMULATOR DATA 0-15. Bidirectional bus between the data transceivers (U3K-U3N) and the emulation memory control board. This bus carries all data information for emulation processor and mainframe computer data transactions with emulation memory.
LMA0-18	LOW MEMORY ADDRESS 0-18. Input to the address decoders and the address buffers from the emulation memory controller. These are active low lines. LMA14-LMA18 are input to the address decoders, which select the correct row of RAM for a transaction; and LMA0-13 are input to the address buffers, which drive the address lines of the RAM's to select the desired memory location within the row.
LWRL	LOW WRITE LOWER. Input to U2K from the Memory Controller. When low, indicates that the controller wishes to write data into the lower byte of the selected and addressed row of RAM (D0-7), either for an emulation or mainframe computer write cycle.
LWRU	LOW WRITE UPPER. Input to U2K from the emulation memory controller. When low, indicates that the controller wishes to write data into the upper byte of RAM (D8-15), either for an emulation or mainframe computer write cycle.
RD/LWRT	READ/WRITE. Input from the emulation memory control board to the data buffer control gating and the data transceiver control logic. A low on this line enables one-half of transceivers U3K-U3N so that data from the emulation memory controller may be driven to the RAM data inputs during a write cycle. When RD/LWRT is high it allows the transceivers to be oriented for a data read cycle whenever a row of RAM is selected on the board.

TO/FROM CPU MAINFRAME

LID LOW ID. Enables Memory Board to output its ID code onto the Low Data Bus to the CPU.

LSEL LOW SLOT SELECT. When low enables the slot select buffer on the mainframe.

LD0-8 LOW DATA 0-8. When low these lines identify the Memory Board to the Mainframe CPU.

01F8	64161A/162A/163A
01F9	64162A
01FA	64163A

LSTB LOW STROBE. Active low, during write operation, indicates data bus information is valid; during read operation indicates CPU is not driving the data bus and addressed device can drive data bus.

INTRABOARD MNEMONICS

A0-13" ADDRESS 0-13". Output from address buffers U2C-U2F, and input to the RAM array. These lines are used to select the desired memory location in the rows 3 and 4 of RAM for the data transfer (read or write cycle).

A0-13' ADDRESS 0-13'. Output from address buffers U2C-U2F, and input to the RAM array. These lines are used to select the desired memory location in the rows 1 and 2 of RAM for the data transfer (read or write cycle).

DIN0-15 DATA IN 0-15. Input to the RAM array from data transceivers U3k-3N. This bus is used to provide the desired information for storage in the selected RAM location during a data write cycle.

DOUT0-15 DATA OUT 0-15. Output to the memory bus from the RAM array through data transceivers Ux-Ux. Valid data will be presented on this bus by the selected row of the RAM array whenever a location is addressed, the CS/line is asserted, and the WE/ line of the RAM's is left high.

HRDEN HIGH READ ENABLE. Output generated by U3GB whenever any one of the four rows of memory are selected by the Row Select Decoders. When HRDEN and RD/LWRT are both high U3JA generates a low signal which enables the data transceivers U3K-U3N.

LINVMA18 LOW INVERTED MEMORY ADDRESS 18. When this signal is low (LMA18 is high) and LMA17 is high U2J is enabled; when this signal is low and LMA 17 is low U2I is enabled.

LRD LOW READ. This signal, generated when HRDEN and RD/WRT are both high enables the data transceivers to be read.

ROWSEL1-4 ROW SELECT 1-4. Output from the pullup/damping network (CR1-7 and RP1,R6-9), which is driven by the address decoders through the address range jumpers. A low on one of these lines selects the corresponding row of RAM for a data transaction by asserting the RAM's chip select line.

Table 8-2. Logic Symbols

GENERAL

All signals flow from left to right, relative to the symbol's orientation with inputs on the left side of the symbol, and outputs on the right side of the symbol (the symbol may be reversed if the dependency notation is a single term.)

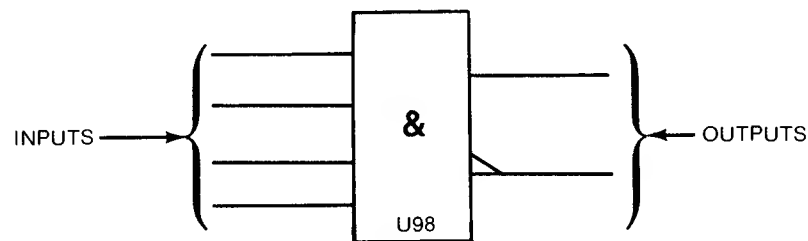
All dependency notation is read from left to right (relative to the symbol's orientation).

An external state is the state of an input or output outside the logic symbol.

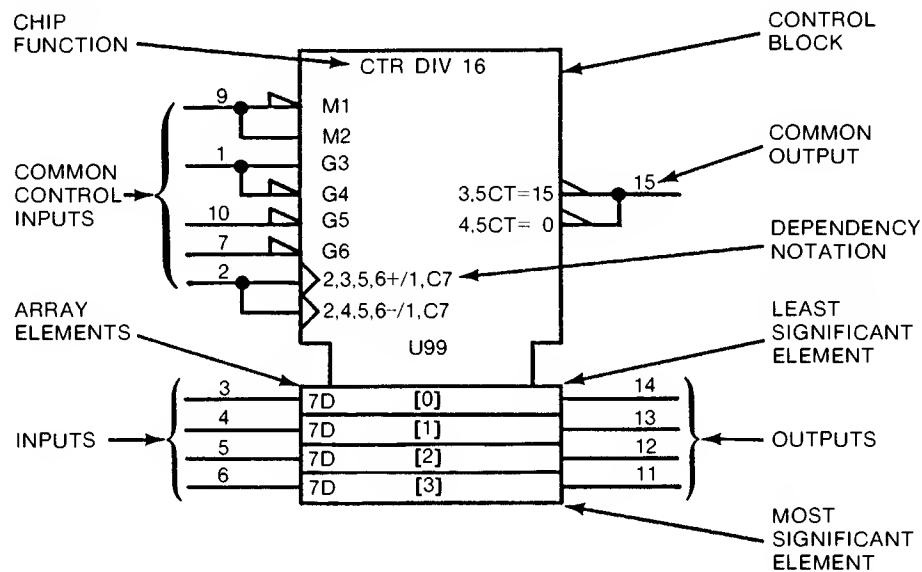
An internal state is the state of an input or output inside the logic symbol. All internal states are True = High.

SYMBOL CONSTRUCTION

Some symbols consist of an outline or combination of outlines together with one or more qualifying symbols, and the representation of input and output lines.



Some have a common Control Block with an array of elements:



CONTROL BLOCK - All inputs and dependency notation affect the array elements directly. Common outputs are located in the control block. (Control blocks may be above or below the array elements.)

ARRAY ELEMENTS -All array elements are controlled by the control block as a function of the dependency notation. Any array element is independent of all other array elements. Unless indicated, the least significant element is always closest to the control block. The array elements are arranged by binary weight. The weights are indicated by powers of 2 (shown in []).

Table 8-2. Logic Symbols (con't)

INPUTS - Inputs are located on the left side of the symbol and are affected by their dependency notation.

Common control inputs are located in the control block and control the inputs/outputs to the array elements according to the dependency notation.

Inputs to the array elements are located with the corresponding array element with the least significant element closest to the control block.

OUTPUTS - Outputs are located on the right side of the symbol and are effected by their dependency notation.

Common control outputs are located in the control block.

Outputs of array elements are located in the corresponding array element with the least significant bit closest to the control block.

CHIP FUNCTION - The labels for chip functions are defined, i.e., CTR - counter, MUX - multiplexer.

DEPENDENCY NOTATION

Dependency notation is always read from left to right relative to the symbol's orientation.

Dependency notation indicates the relationship between inputs, outputs, or inputs and outputs. Signals having a common relationship will have a common number, i.e., C7 and 7D....C7 controls D. Dependency notation 2,3,5,6+/1,C7 is read as when 2 and 3 and 5 and 6 are true, the input will cause the counter to increment by one count....or (/) the input (C7) will control the loading of the input value (7D) into the D flip-flops.

The following types of dependencies are defined:

- a. AND (G), OR (V), and Negate (N) denote Boolean relationship between inputs and outputs in any combination.
- b. Interconnection (Z) indicates connections inside the symbol.
- c. Control (C) identifies a timing input or a clock input of a sequential element and indicates which inputs are controlled by it.
- d. Set (S) and Reset (R) specify the internal logic states (outputs) of an RS bistable element when the R or S input stands at its internal 1 state.
- e. Enable (EN) identifies an enable input and indicates which inputs and outputs are controlled by it (which outputs can be in their high impedance state).
- f. Mode (M) identifies an input that selects the mode of operation of an element and indicates the inputs and outputs depending on that mode.
- g. Address (A) identifies the address inputs.
- h. Transmission (X) identifies bi-directional inputs and outputs that are connected together when the transmission input is true.



 



 
 






 

 
 

 


 

 
DEPENDENCY NOTATION SYMBOLS

A	Address (selects inputs/outputs) (indicates binary range)	N	Negate (compliments state)
C	Control (permits action)	R	Reset Input
EN	Enable (permits action)	S	Set Input
G	AND (permits action)	V	OR (permits action)
M	Mode (selects action)	Z	Interconnection
		X	Transmission

LS-08-09-82 - 2

Table 8-2. Logic Symbols (con't)

OTHER SYMBOLS

 Analog Signal	 Inversion	 Shift Right (or down)
 AND	 Negation	 Solidus (allows an input or output to have more than one function)
 Bit Grouping	 Nonlogic Input/Output	 Tri-State
 Buffer	 Open Circuit (external resistor)	 Causes notation and symbols to effect inputs/outputs in an AND relationship, and to occur in the order read from left to right.
 Compare	 Open Circuit (external resistor)	 Used for factoring terms using algebraic techniques.
 Dynamic	≥ 1 OR	 Information not defined.
$\neq 1$ Exclusive OR	 Passive Pull Down (internal resistor)	 Logic symbol not defined due to complexity.
 Hysteresis	 Passive Pull Up (internal resistor)	
 Interrogation	 Postponed	
 Internal Connection	 Shift Left (or up)	

LABELS

BG	Borrow Generate	CO	Carry Output	J	J Input
BI	Borrow Input	CP	Carry Propagate	K	K Input
BO	Borrow Output	CT	Content	P	Operand
BP	Borrow Propagate	D	Data Input	T	Transition
CG	Carry Generate	E	Extension (input or output)	+	Count Up
CI	Carry Input	F	Function	-	Count Down

MATH FUNCTIONS

Σ	Adder	>	Greater Than
ALU	Arithmetic Logic Unit	<	Less Than
COMP	Comparator	CPG	Look Ahead Carry Generator
DIV	Divide By	π	Multiplier
=	Equal To	P-Q	Subtractor

CHIP FUNCTIONS

BCD	Binary Coded Decimal	DIR	Directional	RAM	Random Access Memory
BIN	Binary	DMUX	Demultiplexer	RCVR	Line Receiver
BUF	Buffer	FF	Flip-Flop	ROM	Read Only Memory
CTR	Counter	MUX	Multiplexer	SEG	Segment
DEC	Decimal	OCT	Octal	SRG	Shift Register

DELAY and MULTIVIBRATORS

 
 
 


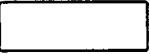










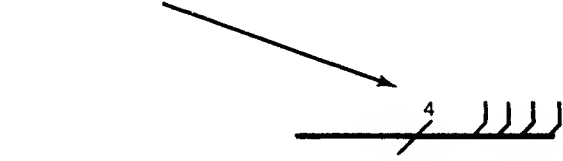
 Astable	
 Delay	
 Nonretriggerable Monostable	
NV	Nonvolatile
 Retriggerable Monostable	

Table 8-3. Schematic Diagram Notes

	ETCHED CIRCUIT BOARD	(925)	WIRE COLORS ARE GIVEN BY NUMBERS IN PARENTHESES USING THE RESISTOR COLOR CODE
	FRONT PANEL MARKING		[(925) IS WHT-RED-GRN] 0 - BLACK 5 - GREEN 1 - BROWN 6 - BLUE 2 - RED 7 - VIOLET 3 - ORANGE 8 - GRAY 4 - YELLOW 9 - WHITE
	REAR-PANEL MARKING		
	MANUAL CONTROL		* OPTIMUM VALUE SELECTED AT FACTORY, TYPICAL VALUE SHOWN; PART MAY HAVE BEEN OMITTED.
	SCREWDRIVER ADJUSTMENT		
 TP1	ELECTRICAL TEST POINT TP (WITH NUMBER)		UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS CAPACITANCE IN PICO FARADS INDUCTANCE IN MICROHENRIES
	NUMBERED WAVEFORM NUMBER CORRESPONDS TO ELECTRICAL TEST POINT NO.	μP = P/O = NC = CW =	MICROPROCESSOR PART OF NO CONNECTION CLOCKWISE END OF VARIABLE RESISTOR
	LETTERED TEST POINT NO MEASUREMENT AID PROVIDED		
	COMMON CONNECTIONS. ALL LIKE-DESIGNATED POINTS ARE CONNECTED.		
 3	NUMBER ON WHITE BACKGROUND = OFF-PAGE CONNECTION. LARGE NUMBER ADJACENT = SERVICE SHEET NUMBER FOR OFF-PAGE CONNECTION.		
	CIRCLED LETTER = OFF-PAGE CONNECTION BETWEEN PAGES OF SAME SERVICE SHEET.		
	INDICATES SINGLE SIGNAL LINE		
	NUMBER OF LINES ON A BUS		

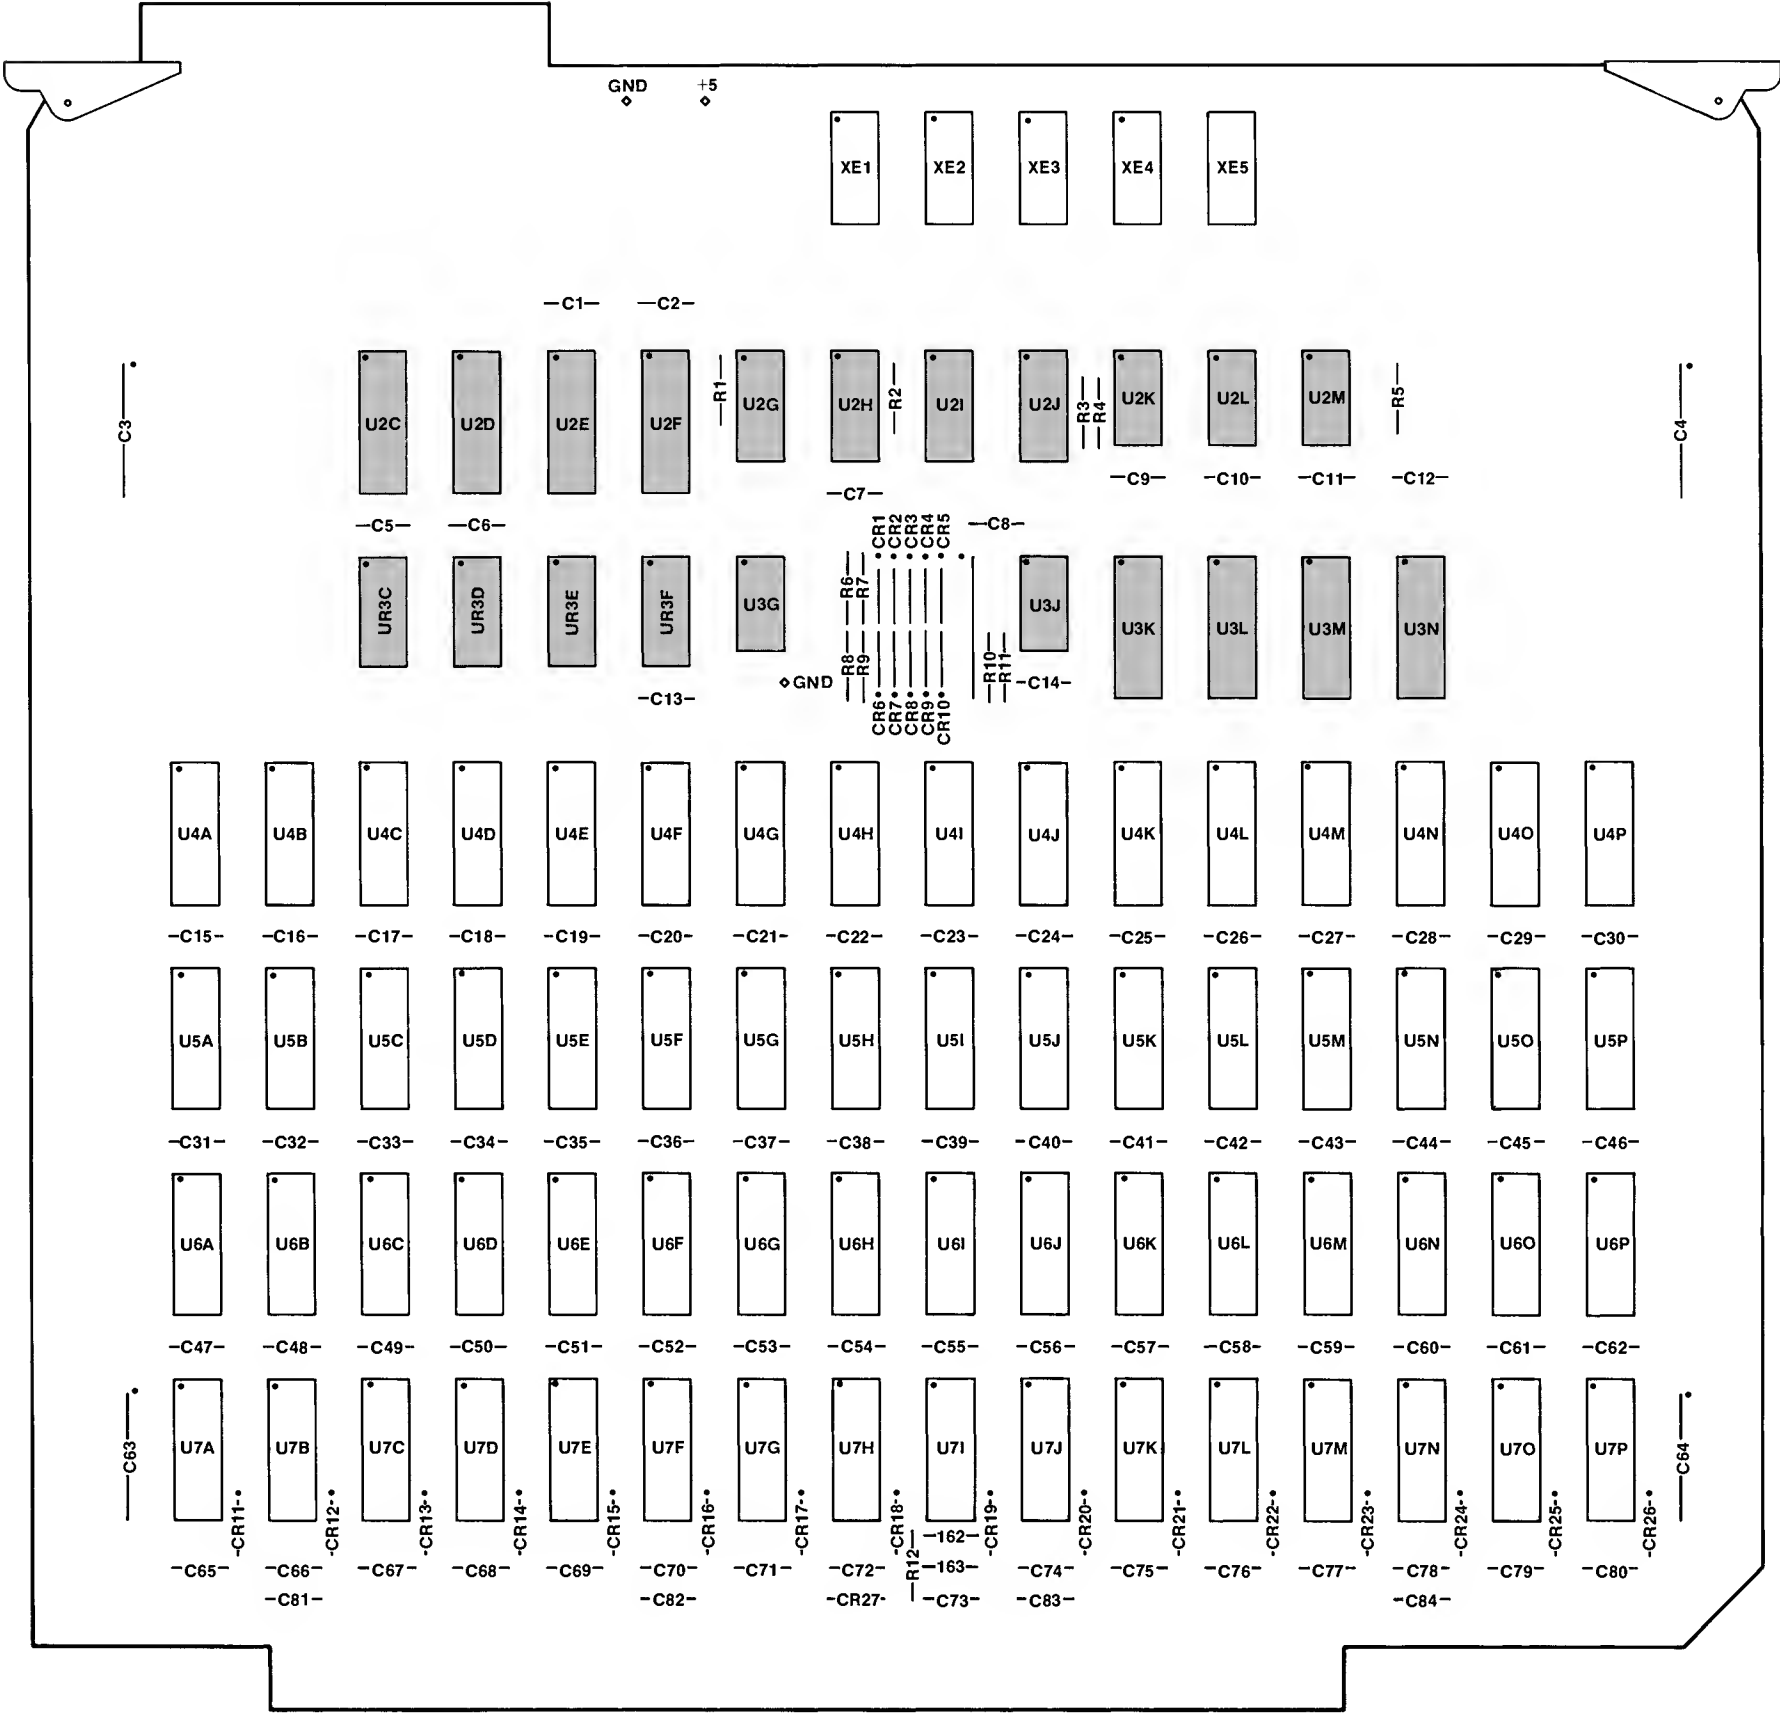
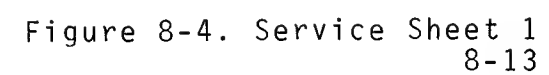
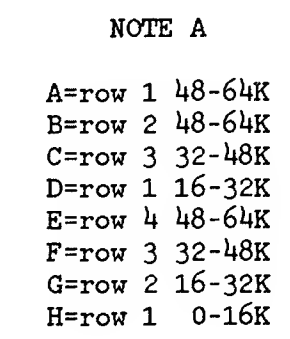
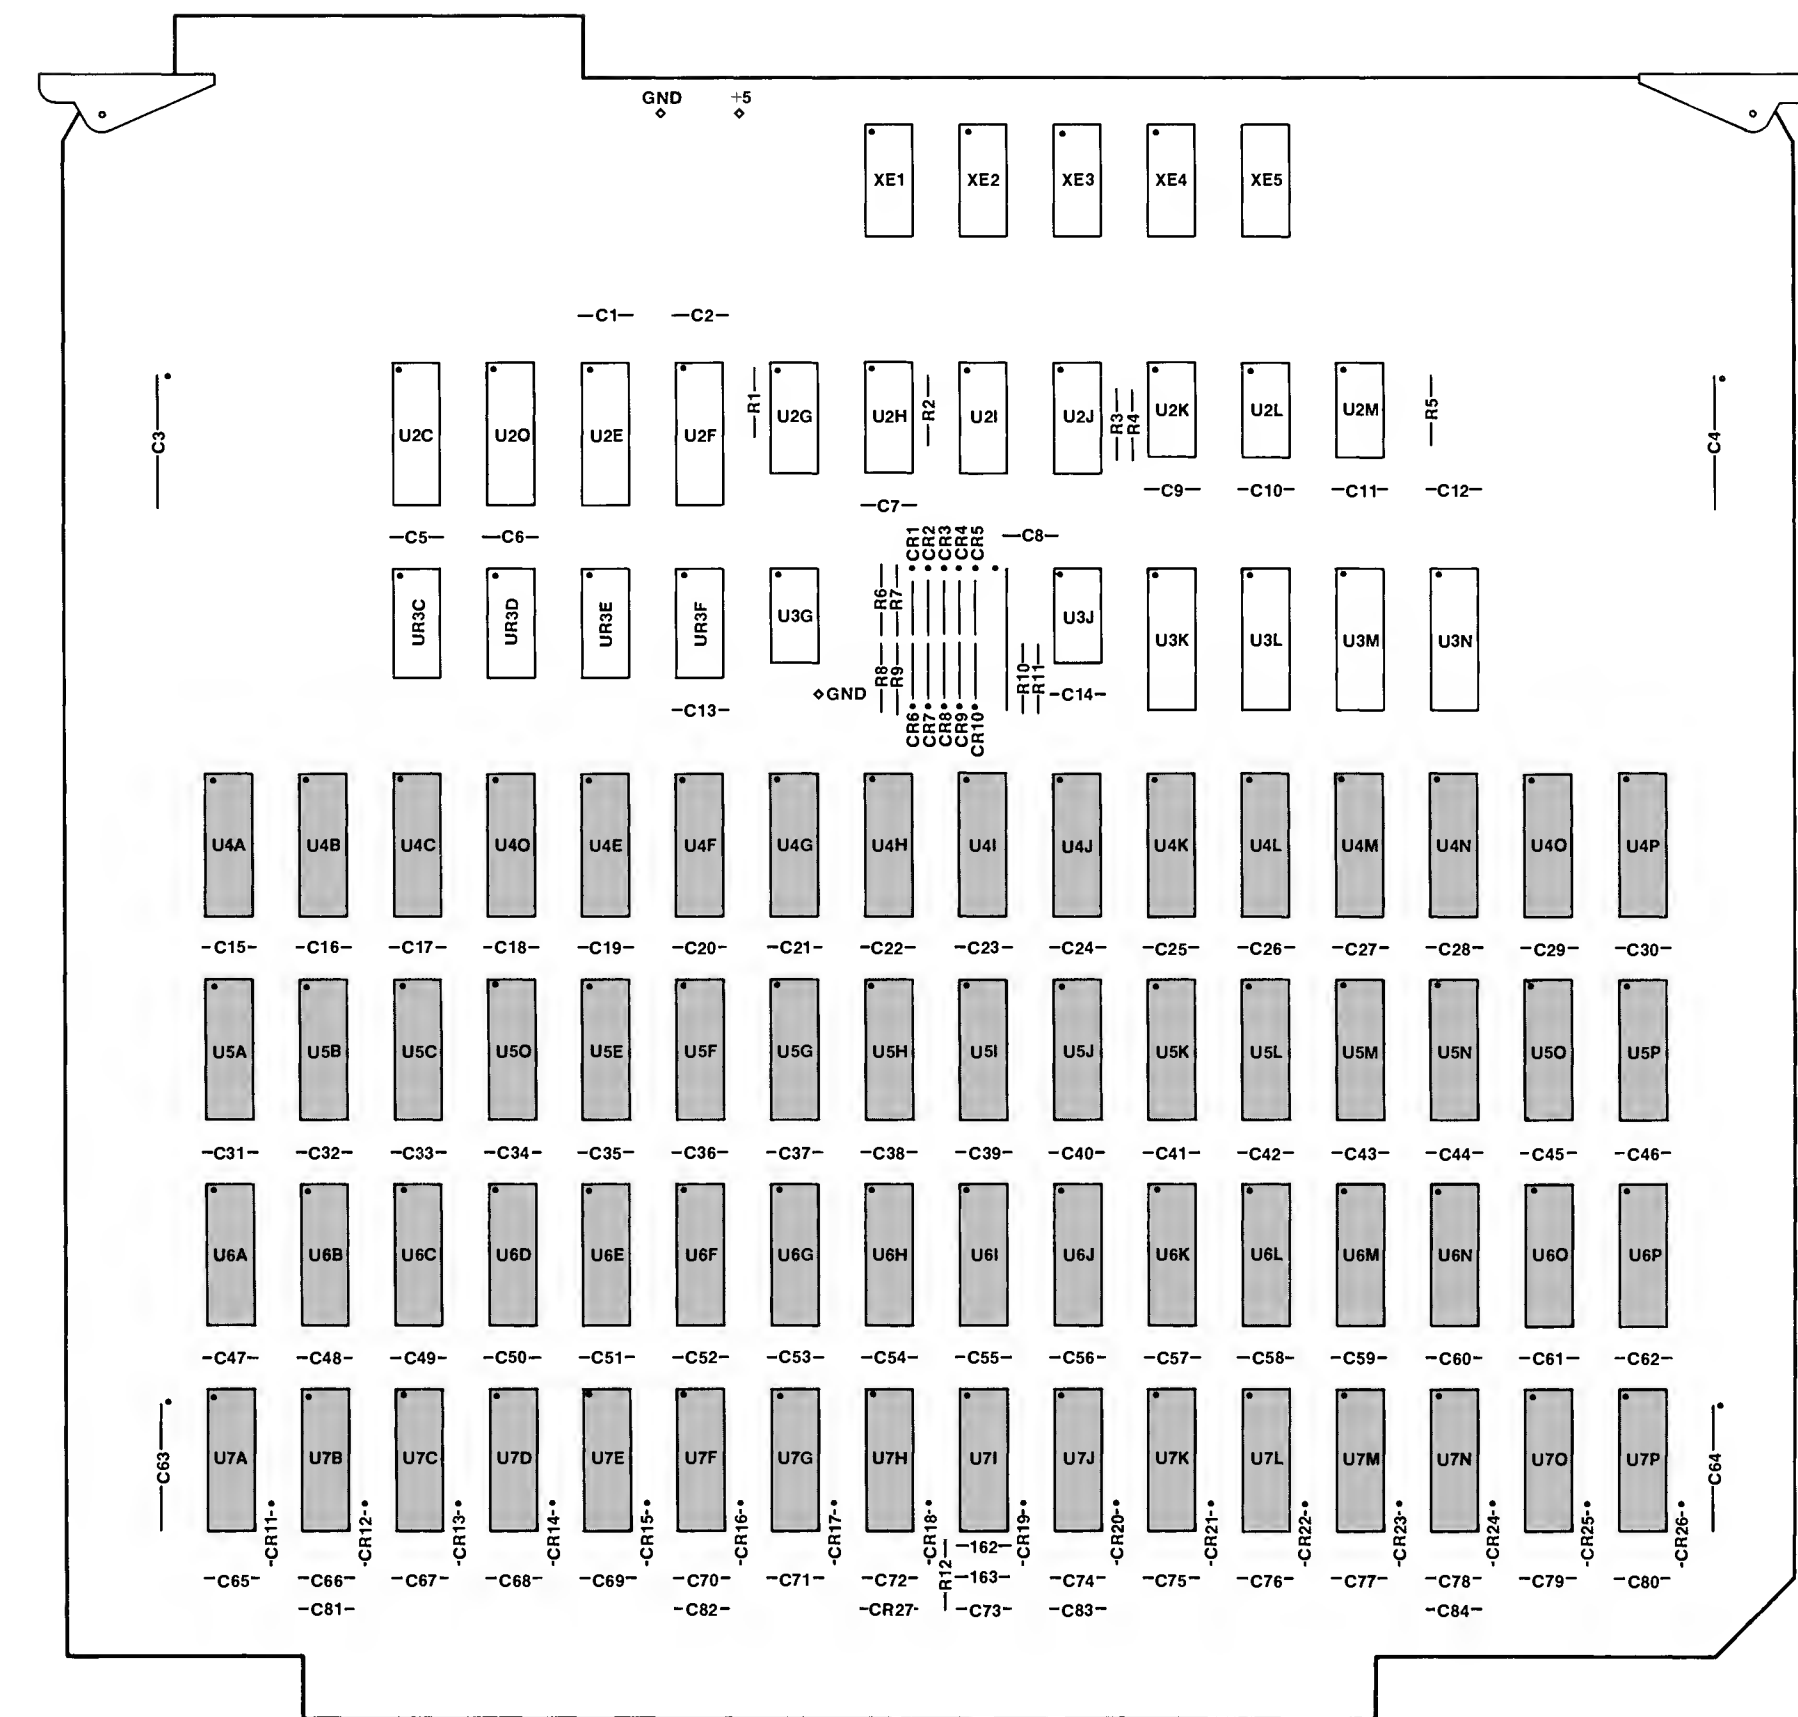


Figure 8-3. Model 64161A/162A/163A Component Locator
8-12



Figure 8-5. Model 64161A/162A/163A Component Locator
8-14

IC'S ON THIS SCHEMATIC

U4A-U4P	HM6167	1818-1969
U5A-U5P	HM6167	1818-1969
U6A-U6P	HM6167	1818-1969
U7A-U7P	HM6167	1818-1969

PARTS ON THIS SCHEMATIC

CR15-30, CR31-46, CR47-62, CR65-84

+5V 20 10 U4A-U4P, U5A-U5P, U6A-U6P, U7A-U7P

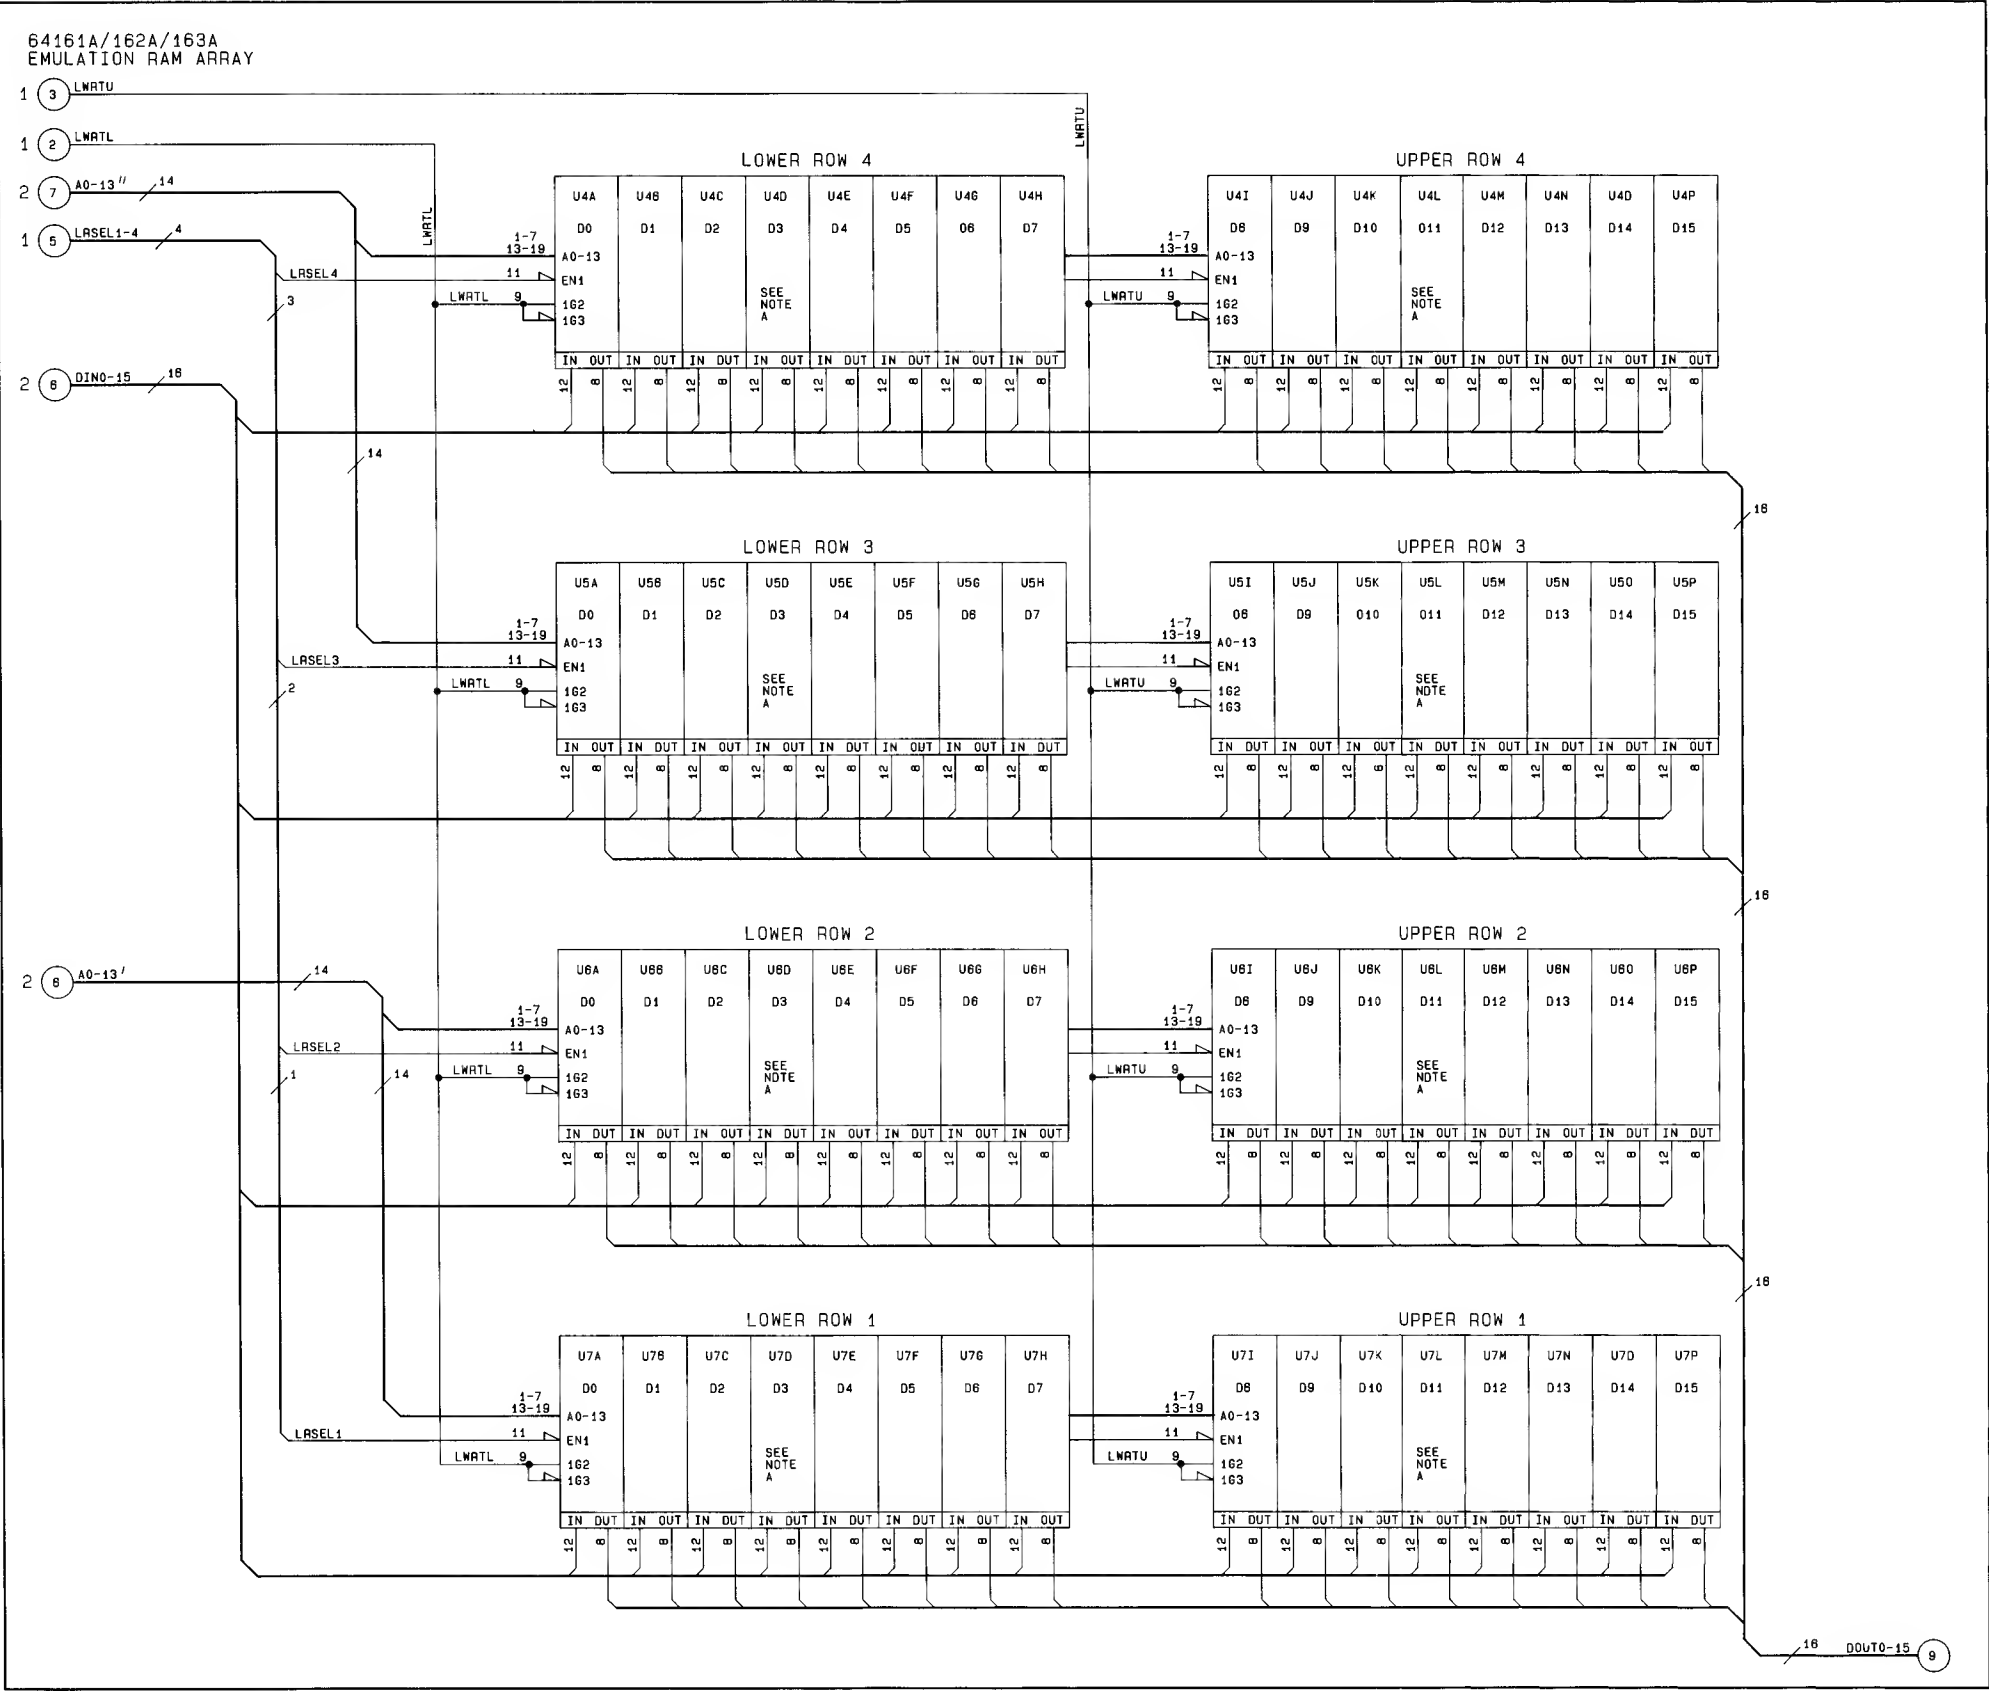


Figure 8-6. Service Sheet 2
8-15

FOLD HERE



NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

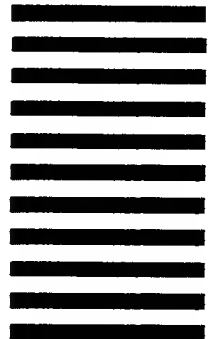
BUSINESS REPLY CARD

FIRST CLASS PERMIT NO. 1303 COLORADO SPRINGS, COLORADO

POSTAGE WILL BE PAID BY ADDRESSEE

HEWLETT-PACKARD

Logic Product Support Dept.
Attn: Technical Publications Manager
Centennial Annex - D2
P.O. Box 617
Colorado Springs, Colorado 80901-0617



FOLD HERE

Your cooperation in completing and returning this form
will be greatly appreciated. Thank you.

READER COMMENT SHEET

Service Manual, Model 64161A/162A/163A
Emulation Memory

64161-90901, January 1984

Part Number: _____

Your comments are important to us. Please answer this questionnaire and return it to us. Circle the number that best describes your answer in questions 1 through 7. Thank you.

1. The information in this book is complete:

Doesn't cover enough
(what more do you need?)

1 2 3 4 5

Covers everything

2. The information in this book is accurate:

Too many errors

1 2 3 4 5

Exactly right

3. The information in this book is easy to find:

I can't find things I need

1 2 3 4 5

I can find info quickly

4. The Index and Table of Contents are useful:

Helpful

1 2 3 4 5

Missing or inadequate

5. What about the "how-to" procedures and examples:

No help

1 2 3 4 5

Very helpful

Too many now

1 2 3 4 5

I'd like more

6. What about the writing style:

Confusing

1 2 3 4 5

Clear

7. What about organization of the book:

Poor order

1 2 3 4 5

Good order

8. What about the size of the book:

too big/small

1 2 3 4 5

Right size

Comments: _____

Particular pages with errors?

Name (optional): _____

Job title: _____

Company: _____

Address: _____

Note: If mailed outside U.S.A., place card in envelope. Use address shown on other side of this card.

SALES & SUPPORT OFFICES

Arranged alphabetically by country



Product Line Sales/Support Key

Key Product Line

- A Analytical
- CM Components
- C Computer Systems Sales only
- CH Computer Systems Hardware Sales and Services
- CS Computer Systems Software Sales and Services
- E Electronic Instruments & Measurement Systems
- M Medical Products
- MP Medical Products Primary SRO
- MS Medical Products Secondary SRO
- P Personal Computation Products
- * Sales only for specific product line
- ** Support only for specific product line

IMPORTANT: These symbols designate general product line capability. They do not insure sales or support availability for all products within a line, at all locations. Contact your local sales office for information regarding locations where HP support is available for specific products.

HP distributors are printed in italics.

HEADQUARTERS OFFICES

If there is no sales office listed for your area, contact one of these headquarters offices.

NORTH/CENTRAL AFRICA

Hewlett-Packard S.A.
7, Rue du Bois-du-Lan
CH-1217 MEYRIN 2, Switzerland
Tel: (022) 83 12 12
Telex: 27835 hpse
Cable: HEWPACKSA Geneve

ASIA

Hewlett-Packard Asia Ltd.
6th Floor, Sun Hung Kai Centre
30 Harbour Rd.
G.P.O. Box 795
HONG KONG
Tel: 5-832 3211
After Jan. 1, 1984
47th Floor, China Resources Bldg.
26 Harbour Rd., Wanchai
HONG KONG
Tel: 66678 HEWPA HK
Cable: HEWPACK HONG KONG

CANADA

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
Telex: 610-492-4246

EASTERN EUROPE

Hewlett-Packard Ges.m.b.h.
Liebigasse 1
P.O.Box 72
A-1222 VIENNA, Austria
Tel: (222) 2365110
Telex: 1 3 4425 HEPA A

NORTHERN EUROPE

Hewlett-Packard S.A.
Uilenstede 475
P.O.Box 999
NL-1180 AZ AMSTELVEEN
The Netherlands
Tel: 20 437771

SOUTH EAST EUROPE

Hewlett-Packard S.A.
7, Rue du Bois-du-Lan
CH-1217 MEYRIN 2, Switzerland
Tel: (022) 83 12 12
Telex: 27835 hpse
Cable: HEWPACKSA Geneve

OTHER EUROPE

Hewlett-Packard S.A.
P.O. Box
150, Rte du Nant-O'Avril
CH-1217 MEYRIN 2, Switzerland
Tel: (022) 83 8111
Telex: 22486 hpsa
Cable: HEWPACKSA Geneve

MEDITERRANEAN AND MIDDLE EAST

Hewlett-Packard S.A.
Mediterranean and Middle East
Operations
Atrina Centre
32 Kifissias Ave.
Paradissos-Amarousion, ATHENS
Greece
Tel: 682 88 11
Telex: 21-6588 HPAT GR
Cable: HEWPACKSA Athens

EASTERN USA

Hewlett-Packard Co.
4 Choke Cherry Road
ROCKVILLE, MO 20850
Tel: (301) 258-2000

MIDWESTERN USA

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800

SOUTHERN USA

Hewlett-Packard Co.
2000 South Park Place
P.O. Box 105005
ATLANTA, GA 30348
Tel: (404) 955-1500

WESTERN USA

Hewlett-Packard Co.
3939 Lankershim Blvd.
P.O. Box 3919
LOS ANGELES, CA 91604
Tel: (213) 506-3700

OTHER INTERNATIONAL AREAS

Hewlett-Packard Co.
Intercontinental Headquarters
3495 Deer Creek Road
PALO ALTO, CA 94304
Tel: (415) 857-1501
Telex: 034-8300
Cable: HEWPACK

ANGOLA

Teleclra
Empresa Técnica de Equipamentos
R. Barbosa Rodrigues, 41-I DT.
Caixa Postal 6487
LUANDA
Tel: 35515,35516
E,P

ARGENTINA

Hewlett-Packard Argentina S.A.
Avenida Santa Fe 2035
Martínez 1640 BUENOS AIRES
Tel: 798-5735, 792-1293
Telex: 17595 BIONAR
Cable: HEWPACKARG
A,E,CH,CS,P
Biotron S.A.C.I.M. e I.
Av Paseo Colon 221, Piso 9
1399 BUENOS AIRES
Tel: 30-4846, 30-1851
Telex: 17595 BIONAR
M

AUSTRALIA

Adelaide, South Australia Office

Hewlett-Packard Australia Ltd.
153 Greenhill Road
PARKSIDE, S.A. 5063
Tel: 272-5911
Telex: 82536
Cable: HEWPARO Adelaide
A*,CH,CM,,E,MS,P

Brisbane, Queensland Office

Hewlett-Packard Australia Ltd.
10 Payne Road
THE GAP, Queensland 4061
Tel: 30-4133
Telex: 42133
Cable: HEWPARO Brisbane
A,CH,CM,E,M,P

Canberra, Australia

Capital Territory Office
Hewlett-Packard Australia Ltd.
121 Wollongong Street
Fyshwick, A.C.T. 2609
Tel: 80 4244
Telex: 62650
Cable: HEWPARO Canberra
CH,CM,E,P

Melbourne, Victoria Office

Hewlett-Packard Australia Ltd.
31-41 Joseph Street
BLACKBURN, Victoria 3130
Tel: 895-2895
Telex: 31-024
Cable: HEWPARO Melbourne
A,CH,CM,CS,E,MS,P

Perth, Western Australia Office

Hewlett-Packard Australia Ltd.
261 Stirling Highway
CLAREMONT, W.A. 6010
Tel: 383-2188
Telex: 93859
Cable: HEWPARO Perth
A,CH,CM,E,MS,P

Sydney, New South Wales Office

Hewlett-Packard Australia Ltd.
17-23 Talavera Road
P.O. Box 308
NORTH RYDE, N.S.W. 2113
Tel: 887-1611
Telex: 21561
Cable: HEWPARO Sydney
A,CH,CM,CS,E,MS,P

AUSTRIA

Hewlett-Packard Ges.m.b.h.
Grottenhofstrasse 94
A-8052 GRAZ
Tel: (0316) 291 5 66
Telex: 32375
CH,E
Hewlett-Packard Ges.m.b.h.
Liebigasse 1
P.O. Box 72
A-1222 VIENNA
Tel: (0222) 23 65 11-0
Telex: 134425 HEPA A
A,CH,CM,CS,E,MS,P

BAHRAIN

Green Salon
P.O. Box 557
Manama
BAHRAIN
Tel: 255503-255950
Telex: 84419
P

Wael Pharmacy
P.O. Box 648

BAHRAIN
Tel: 256123
Telex: 8550 WAEI BN
E,C,M

BELGIUM

Hewlett-Packard Belgium S.A./N.V.
Blvd de la Woluwe, 100
Woluwedal
B-1200 BRUSSELS
Tel: (02) 762-32-00
Telex: 23-494 paloben bru
A,CH,CM,CS,E,MP,P

BRAZIL

Hewlett-Packard do Brasil I.e.C. Ltda.
Alameda Rio Negro, 750
Alphaville
06400 BARUERI SP
Tel: (011) 421.1311
Telex: (011) 33872 HPBR-BR
Cable: HEWPACK Sao Paulo
A,CH,CM,CS,E,M,P
Hewlett-Packard do Brasil I.e.C. Ltda.
Avenida Epitacio Pessoa, 4664
22471 RIO DE JANEIRO-RJ
Tel: (021) 286.0237
Telex: 021-21905 HPBR-BR
Cable: HEWPACK Rio de Janeiro
A,CH,CM,E,MS,P*
ANAMED I.C.E.I. Ltda.
Rua Bage, 103
04012 SAO PAULO
Tel: (011) 570-5726
Telex: 021-21905 HPBR-BR
M



SALES & SUPPORT OFFICES

Arranged alphabetically by country

CANADA

Alberta

Hewlett-Packard (Canada) Ltd.
3030 3rd Avenue N.E.
CALGARY, Alberta T2A 6T7
Tel: (403) 235-3100
A,CH,CM,E*,MS,P*

Hewlett-Packard (Canada) Ltd.
11120A-178th Street
EDMONTON, Alberta T5S 1P2
Tel: (403) 486-6666
A,CH,CM,CS,E,MS,P

British Columbia

Hewlett-Packard (Canada) Ltd.
10691 Shellbridge Way
RICHMOND,
British Columbia V6X 2W7
Tel: (604) 270-2277
Telex: 610-922-5059
A,CH,CM,CS,E*,MS,P*

Manitoba

Hewlett-Packard (Canada) Ltd.
380-550 Century Street
WINNIPEG, Manitoba R3H 0Y1
Tel: (204) 786-6701
A,CH,CM,E,MS,P*

Nova Scotia

Hewlett-Packard (Canada) Ltd.
P.O. Box 931
900 Windmill Road
DARTMOUTH, Nova Scotia B2Y 3Z6
Tel: (902) 469-7820
CH,CM,CS,E*,MS,P*

Ontario

Hewlett-Packard (Canada) Ltd.
3325 N. Service Rd., Unit 6
BURLINGTON, Ontario P3A 2A3
Tel: (416) 335-8644
CS,M*

Hewlett-Packard (Canada) Ltd.
552 Newbold Street
LONDON, Ontario N6E 2S5
Tel: (519) 686-9181
A,CH,CM,E*,MS,P*

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
A,CH,CM,CS,E,MP,P

Hewlett-Packard (Canada) Ltd.
2670 Queensview Or.
OTTAWA, Ontario K2B 8K1
Tel: (613) 820-6483
A,CH,CM,CS,E*,MS,P*

Hewlett-Packard (Canada) Ltd.
220 Yorkland Blvd., Unit #11
WILLOWDALE, Ontario M2J 1R5
Tel: (416) 499-9333
CH

Quebec

Hewlett-Packard (Canada) Ltd.
17500 South Service Road
Trans-Canada Highway
KIRKLAND, Quebec H9J 2M5
Tel: (514) 697-4232
A,CH,CM,CS,E,MP,P*

Hewlett-Packard (Canada) Ltd.
Les Galeries du Vallon
2323 Du Versant Nord
STE. FOY, Quebec G1N 4C2
Tel: (418) 687-4570
CH

CHILE

Jorge Calcagni y Cia. Ltda.
Av. Italia 634 Santiago
Casilla 16475
SANTIAGO 9
Tel: 222-0222
Telex: Public Booth 440001
A,CM,E,M

Olympia (Chile) Ltda.
Av. Rodrigo de Araya 1045
Casilla 256-V
SANTIAGO 21
Tel: (02) 22 55 044
Telex: 240-565 OLYMP CL
Cable: Olympiachile Santiagochile
CH,CS,P

CHINA, People's Republic of

China Hewlett-Packard Rep. Office
P.O. Box 418
1A Lane 2, Luchang St.
Beiwei Rd., Xuanwu District
BEIJING
Tel: 33-1947, 33-7426
Telex: 22601 CTSHP CN
Cable: 192D
A,CH,CM,CS,E,P

COLOMBIA

Instrumentación
H. A. Langebaek & Kier S.A.
Carrera 4A No. 52A-26
Apartado Aereo 6287
BOGOTA 1, D.E.
Tel: 212-1466
Telex: 444DD INST CO
Cable: AARIS Bogota
CM,E,M

Casa Humboldt Ltda.
Carrera 14, No. 98-60
Apartado Aereo 51283
BOGOTA 1, D.E.
Tel: 256-1686
Telex: 45403 CCAL CO.
A

COSTA RICA

Cientifica Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 1D159
SAN JOSE
Tel: 24-38-2D, 24-08-19
Telex: 2367 GALGUR CR
CM,E,M

CYPRUS

Telerexa Ltd.
P.O. Box 4809
14C Stassinou Avenue
NICOSIA
Tel: 62698
Telex: 2894 LEVIDO CY
E,M,P

DENMARK

Hewlett-Packard A/S
Oatavej 52
OK-3460 BIRKEROD
Tel: (02) 81-66-40
Telex: 37409 hpas dk
A,CH,CM,CS,E,MS,P

Hewlett-Packard A/S
Rølgædsvej 32
OK-8240 RISSKOV, Aarhus
Tel: (06) 17-60-00
Telex: 37409 hpas dk
CH,E

DOMINICAN REPUBLIC

Microprog S.A.
Juan Tomás Mejía y Cotes No. 6D
Arroyo Hondo
SANTO DOMINGO
Tel: 565-6268
Telex: 4510 ARENTA OR (RCA) P

ECUADOR

CYEDE Cia. Ltda.
Avenida Eloy Alfaro 1749
Casilla 6423 CCI
QUITO
Tel: 450-975, 243-052
Telex: 2548 CYEDE ED
CM,E,P

Hospitalar S.A.

Robles 625
Casilla 359D
QUITO
Tel: 545-250, 545-122
Telex: 2485 HOSPTL ED
Cable: HOSPITALAR-Quito
M

EGYPT

International Engineering Associates
24 Hussein Hegazi Street
Kasr-el-Aini
CAIRO
Tel: 23829, 21641
Telex: IEA UN 93830
CH,CS,E,M

EGYPTOR
P.O.Box 2558
42 El Zahraa Street
CAIRO, Egypt
Tel: 65 00 21
Telex: 93 337
P

EL SALVADOR

IPESA de El Salvador S.A.
29 Avenida Norte 1216
SAN SALVADOR
Tel: 26-6858, 26-6868
Telex: 20539 IPESASAL
A,CH,CM,CS,E,P

FINLAND

Hewlett-Packard Oy
Revontulentie 7
PL 24
SF-02101 ESP00 10
Tel: (90) 4550211
Telex: 121563 hewpa sf
CH,CM,CS,P

Hewlett-Packard Oy
(Olarinluoma 7)
PL 24
02101 ESP00 10
Tel: (90) 4521022
A,E,MS

Hewlett-Packard Oy
Aatoksenkatv 10-C
SF-40720-72 JYVASKYLA
Tel: (941) 216318
CH

Hewlett-Packard Oy
Kainuntie 1-C
SF-90140-14 OULU
Tel: (981) 338785
CH

FRANCE

Hewlett-Packard France
Z.I. Mercure B
Rue Berthelot
F-13763 Les Milles Cedex
AIX-EN-PROVENCE
Tel: 16 (42) 59-41-02
Telex: 410770F
A,CH,E,MS,P*

Hewlett-Packard France
64, rue Marchand Saillant
F-61000 ALENCON
Tel: 16 (33) 29 04 42

Hewlett-Packard France
Boite Postale 503
F-25026 BESANCON
28 rue de la Republique
F-25000 BESANCON
Tel: 16 (81) 83-16-22
CH,M

Hewlett-Packard France
13, Place Napoleon III
F-29000 BREST
Tel: 16 (98) 03-38-35

Hewlett-Packard France
Chemin des Mouilles
Boite Postale 162
F-69130 ECULLY Cedex (Lyon)
Tel: 16 (78) 833-81-25
Telex: 310617F
A,CH,CS,E,MP

Hewlett-Packard France
Tour Lorraine
Boulevard de France
F-91035 EVRY Cedex
Tel: 16 6 077-96-60
Telex: 692315F
E

Hewlett-Packard France
Parc d'Activite du Bois Briard
Ave. du Lac
F-91040 EVRY Cedex
Tel: 16 6 077-8383
Telex: 692315F
E

Hewlett-Packard France
5, avenue Raymond Chanas
F-38320 EYBENS (Grenoble)
Tel: 16 (76) 25-81-41
Telex: 980124 HP GRENOB EYBE
CH

Hewlett-Packard France
Centre d'Affaire Paris-Nord
Bâtiment Ampère 5 étage
Rue de la Commune de Paris
Boite Postale 300
F-93153 LE BLANC MESNIL
Tel: 16 (1) 865-44-52
Telex: 211032F
CH,CS,E,MS

Hewlett-Packard France
Parc d'Activités Cadera
Quartier Jean Mermoz
Avenue du Président JF Kennedy
F-33700 MERIGNAC (Bordeaux)
Tel: 16 (56) 34-00-84
Telex: 550105F
CH,E,MS

Hewlett-Packard France
Immuable "Les 3 B"
Nouveau Chemin de la Garde
ZAC de Bois Briard
F-44085 NANTES Cedex
Tel: 16 (40) 50-32-22
CH**



FRANCE (Cont'd)

Hewlett-Packard France
125, rue du Faubourg Bannier
F-45000 ORLEANS
Tel: 16 (38) 68 01 63

Hewlett-Packard France
Zone Industrielle de Courtaboeuf
Avenue des Tropiques
F-91947 Les Ulis Cedex ORSAY
Tel: (6) 907-78-25
Telex: 600048F
A,CH,CM,CS,E,MP,P

Hewlett-Packard France
Paris Porte-Maillot
15, Avenue de L'Amiral Bruix
F-75782 PARIS CEDEX 16
Tel: 16 (1) 502-12-20
Telex: 613663F
CH,MS,P

Hewlett-Packard France
124, Boulevard Tourasse
F-64000 PAU
Tel: 16 (59) 80 38 02

Hewlett-Packard France
2 Allée de la Bourgonnette
F-35100 RENNES
Tel: 16 (99) 51-42-44
Telex: 740912F
CH,CM,E,MS,P*

Hewlett-Packard France
98 Avenue de Bretagne
F-76100 ROUEN
Tel: 16 (35) 63-57-66
CH*,CS

Hewlett-Packard France
4 Rue Thomas Mann
Boite Postale 56
F-67033 STRASBOURG Cedex
Tel: 16 (88) 28-56-46
Telex: 890141F
CH,E,MS,P*

Hewlett-Packard France
Le Périgole
20, Chemin du Pigeonnier de la
Cépière
F-31083 TOULOUSE Cedex
Tel: 16 (61) 40-11-12
Telex: 531639F
A,CH,CS,E,P*

Hewlett-Packard France
9, rue Baudin
F-26000 VALENCE
Tel: 16 (75) 42 76 16

Hewlett-Packard France
Carolor
ZAC de Bois Briand
F-57640 VIGY (Metz)
Tel: 16 (8) 771 20 22
CH

Hewlett-Packard France
Immeuble Péricentre
F-59658 VILLENEUVE D'ASCQ Cedex
Tel: 16 (20) 91-41-25
Telex: 160124F
CH,E,MS,P*

GERMAN FEDERAL REPUBLIC

Hewlett-Packard GmbH
Geschäftsstelle
Keilhstrasse 2-4
0-1000 BERLIN 30
Tel: (030) 24-90-86
Telex: 018 3405 hpbln d
A,CH,E,MP

Hewlett-Packard GmbH
Geschäftsstelle
Herrenberger Strasse 130
0-7030 BOBLINGEN
Tel: (7031) 14-0
Telex:

A,CH,CM,CS,E,MP,P
Hewlett-Packard GmbH
Geschäftsstelle
Emanuel-Leutze-Strasse 1
0-4000 DUSSELDORF
Tel: (0211) 5971-1
Telex: 085/86 533 hpdd d
A,CH,CS,E,MS,P

Hewlett-Packard GmbH
Geschäftsstelle
Schleefstr. 28a
0-4600 DORTMUND-Aplerbeck
Tel: (0231) 45001

Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Bernier Strasse 117
Postfach 560 140
0-6000 FRANKFURT 56
Tel: (0611) 50-04-1
Telex: 04 13249 hpffm d
A,CH,CM,CS,E,MP,P

Hewlett-Packard GmbH
Geschäftsstelle
Aussenstelle Bad Homburg
Louisenstrasse 115
0-6380 BAD HOMBURG
Tel: (06172) 109-0

Hewlett-Packard GmbH
Geschäftsstelle
Kapstadtring 5
0-2000 HAMBURG 60
Tel: (040) 63804-1
Telex: 021 63 032 hphh d
A,CH,CS,E,MS,P

Hewlett-Packard GmbH
Geschäftsstelle
Heidering 37-39
0-3000 HANNOVER 61
Tel: (0511) 5706-0
Telex: 092 3259
A,CH,CM,E,MS,P

Hewlett-Packard GmbH
Geschäftsstelle
Rosslauer Weg 2-4
0-6800 MANNHEIM
Tel: (0621) 70050
Telex: 0462105
A,C,E

Hewlett-Packard GmbH
Geschäftsstelle
Messerschmittstrasse 7
0-7910 NEU ULM
Tel: 0731-70241
Telex: 07 12816 HP ULM-0
A,C,E*

Hewlett-Packard GmbH
Geschäftsstelle
Ehhericherstr. 13
0-8500 NÜRNBERG 10
Tel: (0911) 5205-0
Telex: 0623 860
CH,CM,E,MS,P

Hewlett-Packard GmbH
Geschäftsstelle
Eschenstrasse 5
0-8028 TAUFKIRCHEN
Tel: (089) 6117-1
Telex: 0524985
A,CH,CM,E,MS,P

GREAT BRITAIN

See United Kingdom

GREECE

Kostas Karayannis S.A.
8 Omirou Street
ATHENS 133
Tel: 32 30 303, 32 37 371
Telex: 215962 RKAR GR
A,CH,CM,CS,E,MP
PLAISIO S.A.
G. Gerardos
24 Stournara Street
ATHENS
Tel: 36-11-160
Telex: 221871
P

GUATEMALA

IPESA
Avenida Reforma 3-48, Zona 9
GUATEMALA CITY
Tel: 316627, 314786
Telex: 4192 TELTRO GU
A,CH,CM,CS,E,MP

HONG KONG

Hewlett-Packard Hong Kong, Ltd.
G.P.O. Box 795
5th Floor, Sun Hung Kai Centre
30 Harbour Road
HONG KONG
Tel: 5-8323211
Telex: 66678 HEWPA HX
Cable: HEWPACK HONG KONG
E,CH,CS,P

CET Ltd.
1402 Tung Wah Mansion
199-203 Hennessy Rd.
Wanchia, HONG KONG
Tel: 5-729376
Telex: 85148 CET HX
CM
Schmidt & Co. (Hong Kong) Ltd.
Wing On Centre, 28th Floor
Connaught Road, C.
HONG KONG
Tel: 5-455644
Telex: 74766 SCHMX HX
A,M

ICELAND

Elding Trading Company Inc.
Hafnarvöli-Tryggvavötu
P.O. Box 895
IS-REYKJAVIK
Tel: 1-58-20, 1-63-03
M

INDIA

Computer products are sold through
Blue Star Ltd. All computer repairs and
maintenance service is done through
Computer Maintenance Corp.

Blue Star Ltd.
Sabri Complex II Floor
24 Residency Rd.
BANGALORE 560 025
Tel: 55660
Telex: 0845-430
Cable: BLUESTAR
A,CH*,CM,CS*,E

Blue Star Ltd.
Band Box House
Prabhadevi
BOMBAY 400 025
Tel: 422-3101
Telex: 011-3751
Cable: BLUESTAR
A,M

Blue Star Ltd.
Sahas
414/2 Vir Savarkar Marg
Prabhadevi
BOMBAY 400 025
Tel: 422-6155
Telex: 011-4093
Cable: FROSTBLUE
A,CH*,CM,CS*,E,M

Blue Star Ltd.
Kalyan, 19 Vishwas Colony
Alkapuri, BORODA, 390 005
Tel: 65235
Cable: BLUE STAR
A

Blue Star Ltd.
7 Hare Street
CALCUTTA 700 001
Tel: 12-01-31
Telex: 021-7655
Cable: BLUESTAR
A,M

Blue Star Ltd.
133 Kodambakkam High Road
MADRAS 600 034
Tel: 82057
Telex: 041-379
Cable: BLUESTAR
A,M

Blue Star Ltd.
Bhandari House, 7th/8th Floors
91 Nehru Place
NEW DELHI 110 024
Tel: 682547
Telex: 031-2463
Cable: BLUESTAR
A,CH*,CM,CS*,E,M

Blue Star Ltd.
15/16-C Wellesley Rd.
PUNE 411 011
Tel: 22775
Cable: BLUE STAR
A

Blue Star Ltd.
2-2-47/1108 Bolarum Rd.
SECUNDERABAD 500 003
Tel: 72057
Telex: 0155-459
Cable: BLUEFROST
A,E

Blue Star Ltd.
T.C. 7/603 Poornima
Maruthankuzhi
TRIVANDRUM 695 013
Tel: 65799
Telex: 0884-259
Cable: BLUESTAR
E

Computer Maintenance Corporation
Ltd.
115, Sarojini Devi Road
SECUNDERABAD 500 003
Tel: 310-184, 345-774
Telex: 031-2960
CH**



SALES & SUPPORT OFFICES

Arranged alphabetically by country

INDONESIA

BERCA Indonesia P.T.
P.O.Box 496/Jkt.
Jl. Abdul Muis 62
JAKARTA
Tel: 21-373009
Telex: 46748 BERSAL IA
Cable: BERSAL JAKARTA
P
BERCA Indonesia P.T.
P.O.Box 2497/Jkt
Antara Bldg., 17th Floor
Jl. Medan Merdeka Selatan 17
JAKARTA-PUSAT
Tel: 21-344-181
Telex: BERSAL IA
A,CS,E,M
BERCA Indonesia P.T.
P.O. Box 174/SBY.
Jl. Kutei No. 11
SURABAYA
Tel: 68172
Telex: 31146 BERSAL SB
Cable: BERSAL-SURABAYA
A*,E,M,P

IRAQ

Hewlett-Packard Trading S.A.
Service Operation
Al Mansoor City 9B/3/7
BAGHDAD
Tel: 551-49-73
Telex: 212-455 HEPARAO IK
CH,CS

IRELAND

Hewlett-Packard Ireland Ltd.
82/83 Lower Leeson Street
DUBLIN 2
Tel: 0001 608800
Telex: 30439
A,CH,CM,CS,E,M,P
Cardiac Services Ltd.
Kilmore Road
Artane
DUBLIN 5
Tel: (01) 351820
Telex: 30439
M

ISRAEL

Eldan Electronic Instrument Ltd.
P.O.Box 1270
JERUSALEM 91000
16, Ohalav St.
JERUSALEM 94467
Tel: 533 221, 553 242
Telex: 25231 AB/PAKRD IL
A
Electronics Engineering Division
Motorola Israel Ltd.
16 Kremenetski Street
P.O. Box 25016
TEL-AVIV 67899
Tel: 3 88 388
Telex: 33569 Motil IL
Cable: BASTEL Tel-Aviv
CH,CM,CS,E,M,P

ITALY

Hewlett-Packard Italiana S.p.A
Traversa 99C
Via Giulio Petroni, 19
I-70124 **BARI**
Tel: (080) 41-07-44
M

Hewlett-Packard Italiana S.p.A.
Via Martin Luther King, 38/III
I-40132 **BOLOGNA**
Tel: (051) 402394
Telex: 511630
CH,E,MS
Hewlett-Packard Italiana S.p.A.
Via Principe Nicola 43G/C
I-95126 **CATANIA**
Tel: (095) 37-10-87
Telex: 970291
C,P

Hewlett-Packard Italiana S.p.A.
Via G. Oi Vittorio 9
I-20063 **CERNUSCO SUL NAVIGLIO**
(Milano)
Tel: (02) 923691
Telex: 334632
A,CH,CM,CS,E,MP,P
Hewlett-Packard Italiana S.p.A.
Via C. Colombo 49
I-20090 **TREZZANO SUL NAVIGLIO**
(Milano)
Tel: (02) 4459041
Telex: 322116
C,M

Hewlett-Packard Italiana S.p.A.
Via Nuova San Rocco a
Capodimonte, 62/A
I-80131 **NAPOLI**
Tel: (081) 7413544
Telex: 710698
A,CH,E

Hewlett-Packard Italiana S.p.A.
Viale G. Modugno 33
I-16156 **GENOVA PEGLI**
Tel: (010) 68-37-07
Telex: 215238
E,C

Hewlett-Packard Italiana S.p.A.
Via Pelizzo 15
I-35128 **PADOVA**
Tel: (049) 664888
Telex: 430315
A,CH,E,MS

Hewlett-Packard Italiana S.p.A.
Viale C. Pavese 340
I-00144 **ROMA EUR**
Tel: (06) 54831
Telex: 610514
A,CH,CM,CS,E,MS,P*

Hewlett-Packard Italiana S.p.A.
Via di Casellina 57/C
I-50018 **SCANDICCI-FIRENZE**
Tel: (055) 753863

Hewlett-Packard Italiana S.p.A.
Corso Svizzera, 185
I-10144 **TORINO**
Tel: (011) 74 4044
Telex: 221079
CH,E

JAPAN

Yokogawa-Hewlett-Packard Ltd.
152-1, Onna
ATSUGI, Kanagawa, 243
Tel: (0462) 28-0451
CM,C*,E
Yokogawa-Helwelt-Packard Ltd.
Meiji-Seimei Bldg. 6F
3-1 Hon Chiba-Cho
CHIBA, 280
Tel: 472 25 7701
E,CH,CS

Yokogawa-Hewlett-Packard Ltd.
Yasuda-Seimei Hiroshima Bldg.
6-11, Hon-dori, Naka-ku
HIROSHIMA, 730
Tel: 82-241-0611
Yokogawa-Hewlett-Packard Ltd.
Towa Building
2-3, Kaigan-dori, 2 Chome Chuo-ku
KOBE, 650
Tel: (078) 392-4791
C,E

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi 82 Bldg
3-4 Tsukuba
KUMAGAYA, Saitama 360
Tel: (0485) 24-6563
CH,CM,E

Yokogawa-Hewlett-Packard Ltd.
Asahi Shinbun Daiichi Seimei Bldg.
4-7, Hanabata-cho
KUMAMOTO, 860
Tel: (0963) 54-7311
CH,E

Yokogawa-Hewlett-Packard Ltd.
Shin-Kyoto Center Bldg.
614, Higashi-Shiokoji-cho
Karasuma-Nishiiru
Shiokoji-dori, Shimogyo-ku
KYOTO, 600
Tel: 075-343-0921
CH,E

Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Bldg
4-73, Sanno-maru, 1 Chome
MITO, Ibaraki 310
Tel: (0292) 25-7470
CH,CM,E

Yokogawa-Hewlett-Packard Ltd.
Sumitomo Seimei 14-9 Bldg.
Meiki-Minami, 2 Chome
Nakamura-ku
NAGOYA, 450
Tel: (052) 571-5171
CH,CM,CS,E,MS

Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg.,
4-20 Nishinakajima, 5 Chome
Yodogawa-ku
OSAKA, 532
Tel: (06) 304-6021
Telex: YHPOSA 523-3624
A,CH,CM,CS,E,MP,P*

Yokogawa-Hewlett-Packard Ltd.
27-15, Yabe, 1 Chome
SAGAMIHARA Kanagawa, 229
Tel: 0427 59-1311

Yokogawa-Hewlett-Packard Ltd.
Daiichi Seimei Bldg.
7-1, Nishi Shinjuku, 2 Chome
Shinjuku-ku, **TOKYO 160**
Tel: 03-348-4611
CH,E

Yokogawa-Hewlett-Packard Ltd.
29-21 Takaido-Higashi, 3 Chome
Suginami-ku **TOKYO 168**
Tel: (03) 331-6111
Telex: 232-2024 YHPTOK
A,CH,CM,CS,E,MP,P*

Yokogawa-Hewlett-Packard Ltd.
Daiichi Asano Building
2-8, Odori, 5 Chome
UTSUNOMIYA, Tochigi 320
Tel: (0286) 25-7155
CH,CS,E

Yokogawa-Hewlett-Packard Ltd.
Yasuda Seimei Nishiguchi Bldg.
30-4 Tsuruya-cho, 3 Chome
YOKOHAMA 221
Tel: (045) 312-1252
CH,CM,E

JORDAN

Mouasher Cousins Company
P.O. Box 1387
AMMAN
Tel: 24907, 39907
Telex: 21456 SABCO JO
CH,E,M,P

KENYA

ADCOM Ltd., Inc., Kenya
P.O.Box 30070
NAIROBI
Tel: 331955
Telex: 22639
E,M

KOREA

Samsung Electronics HP Division
12 Fl. Kinam Bldg.
San 75-31, Yeoksam-Dong
Kangnam-Ku
Yeongdong P.O. Box 72
SEOUL
Tel: 555-7555, 555-5447
Telex: K27364 SAMSAN
A,CH,CM,CS,E,M,P

KUWAIT

Al-Khaldiya Trading & Contracting
P.O. Box 830 Safat
KUWAIT
Tel: 42-4910, 41-1726
Telex: 22481 Areeg kt
CH,E,M
Photo & Cine Equipment
P.O. Box 270 Safat
KUWAIT
Tel: 42-2846, 42-3801
Telex: 22247 Matin kt
P

LEBANON

G.M. Dolmadian
Achrafieh
P.O. Box 165.167
BEIRUT
Tel: 290293
MP**
Computer Information Systems
P.O. Box 11-6274
BEIRUT
Tel: 89 40 73
Telex: 22259
C

LUXEMBOURG

Hewlett-Packard Belgium S.A./N.V.
Blvd de la Woluwe, 100
Woluwedel
B-1200 BRUSSELS
Tel: (02) 762-32-00
Telex: 23-494 paloben bru
A,CH,CM,CS,E,MP,P

MALAYSIA

Hewlett-Packard Sales (Malaysia)
Sdn. Bhd.
1st Floor, Bangunan British
American
Jalan Semantan, Oamansara Heights
KUALA LUMPUR 23-03
Tel: 943022
Telex: MA31011
A,CH,E,M,P*

SALES & SUPPORT OFFICES

Arranged alphabetically by country

5



MAYLAISIA (Cont'd)

Protel Engineering
P.O. Box 1917
Lot 6624, Section 64
23/4 Pending Road
Kuching, SARAWAK
Tel: 36299
Telex: MA 70904 PROMAL
Cable: PROTELENG
A,E,M

MALTA

Philip Toledo Ltd.
Notabile Rd.
MRIHEL
Tel: 447 47, 455 66
Telex: Media MW 649
E,P

MEXICO

Hewlett-Packard Mexicana, S.A.
de C.V.
Av. Periferico Sur No. 6501
Tepepan, Xochimilco
16020 MEXICO D.F.
Tel: 6-76-46-00
Telex: 17-74-507 HEWPACK MEX
A,CH,CS,E,MS,P
Hewlett-Packard Mexicana, S.A.
de C.V.
Ave. Colonia del Valle 409
Col. del Valle
Municipio de Garza Garcia
MONTERREY, Nuevo Leon
Tel: 78 42 41
Telex: 038 410
CH
ECISA
José Vasconcelos No. 218
Col. Condesa Deleg. Cuauhtémoc
MEXICO D.F. 06140
Tel: 553-1206
Telex: 17-72755 ECE ME
M

MOROCCO

Dolbeau
81 rue Karatchi
CASABLANCA
Tel: 3041-82, 3068-38
Telex: 23051, 22822
E
Gerep
2 rue d'Agadir
Boite Postale 156
CASABLANCA
Tel: 272093, 272095
Telex: 23 739
P

NETHERLANDS

Hewlett-Packard Nederland B.V.
Van Heuven Goedhartlaan 121
NL 1181KK **AMSTELVEEN**
P.O. Box 667
NL1180 AR **AMSTELVEEN**
Tel: (020) 47-20-21
Telex: 13 216 HEPAC NL
A,CH,CM,CS,E,MP,P
Hewlett-Packard Nederland B.V.
Bongerd 2
NL 2906VK **CAPELLE A/D IJSSEL**
P.O. Box 41
NL 2900AA **CAPELLE A/D IJSSEL**
Tel: (10) 51-64-44
Telex: 21261 HEPAC NL
A,CH,CS,E

Hewlett-Packard Nederland B.V.
Pastoor Petersstraat 134-136
NL 5612 LV **EINDHOVEN**
P.O. Box 2342
NL 5600 CH **EINDHOVEN**
Tel: (040) 326911
Telex: 51484 hepae nl
A,CH* * ,E,M

NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd.
5 Owens Road
P.O. Box 26-189
Epsom, **AUCKLAND**
Tel: 687-159
Cable: HEWPACK Auckland
CH,CM,E,P*

Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, **WELLINGTON 3**
P.O. Box 9443
Courtenay Place, **WELLINGTON 3**
Tel: 877-199
Cable: HEWPACK Wellington
CH,CM,E,P
Northrop Instruments & Systems Ltd.
369 Khyber Pass Road
P.O. Box 8602
AUCKLAND
Tel: 794-091
Telex: 60605
A,M

Northrop Instruments & Systems Ltd.
110 Mandeville St.
P.O. Box 8388
CHRISTCHURCH
Tel: 486-928
Telex: 4203
A,M
Northrop Instruments & Systems Ltd.
Sturdee House
85-87 Ghuznee Street
P.O. Box 2406
WELLINGTON
Tel: 850-091
Telex: NZ 3380
A,M

NORTHERN IRELAND

See United Kingdom

NORWAY

Hewlett-Packard Norge A/S
Folke Bernadottes vei 50
P.O. Box 3558
N-5033 **FYLLINGSDALEN** (Bergen)
Tel: 0047/5/16 55 40
Telex: 16621 hpnas n
CH,CS,E,MS
Hewlett-Packard Norge A/S
Østerdalen 16-18
P.O. Box 34
N-1345 **ØSTERÅS**
Tel: 0047/2/17 11 80
Telex: 16621 hpnas n
A,CH,CM,CS,E,M,P

OMAN

Khimjil Ramdas
P.O. Box 19
MUSCAT
Tel: 722225, 745601
Telex: 3289 BROKER MB MUSCAT
P
Suhail & Saud Bahwan
P.O. Box 169
MUSCAT
Tel: 734 201-3
Telex: 3274 BAHWAN MB

PAKISTAN

Mushko & Company Ltd.
1-B, Street 43
Sector F-8/1
ISLAMABAD
Tel: 51071
Cable: FEMUS Rawalpindi
A,E,M
Mushko & Company Ltd.
Oosman Chambers
Abdullah Haroon Road
KARACHI 0302
Tel: 524131, 524132
Telex: 2894 MUSKO PK
Cable: COOPERATOR Karachi
A,E,M,P*

PANAMA

Electrónico Balboa, S.A.
Calle Samuel Lewis, Ed. Alfa
Apartado 4929
PANAMA 5
Tel: 63-6613, 63-6748
Telex: 3483 ELECTRON PG
A,CM,E,M,P

PERU

Cía Electro Médica S.A.
Los Flamencos 145, San Isidro
Casilla 1030
LIMA 1
Tel: 41-4325, 41-3703
Telex: Pub. Booth 25306
CM,E,M,P

PHILIPPINES

The Online Advanced Systems Corporation
Rico House, Amorsolo Cor. Herrera
Street
Legaspi Village, Makati
P.O. Box 1510
Metro MANILA
Tel: 85-35-81, 85-34-91, 85-32-21
Telex: 3274 ONLINE
A,CH,CS,E,M
Electronic Specialists and Proponents Inc.
690-B Epifanio de los Santos Avenue
Cubao, **QUEZON CITY**
P.O. Box 2649 Manila
Tel: 98-96-81, 98-96-82, 98-96-83
Telex: 40018, 42000 ITT GLOBE
MACKAY BOOTH
P

PORTUGAL

Mundinter
Intercambio Mundial de Comércio
S.A.R.L.
P.O. Box 2761
Av. Antonio Augusto de Aguiar 138
P-LISBON
Tel: (19) 53-21-31, 53-21-37
Telex: 16691 munter p
M
Soquimica
Av. da Liberdade, 220-2
1298 **LISBOA** Codex
Tel: 56 21 81/2/3
Telex: 13316 SABASA
P
Telectra-Empresa Técnica de Equipamentos Eléctricos S.A.R.L.
Rua Rodrigo da Fonseca 103
P.O. Box 2531
P-LISBON 1
Tel: (19) 68-60-72
Telex: 12598
CH,CS,E,P

PUERTO RICO

Hewlett-Packard Puerto Rico
Ave. Muñoz Rivera #101
Esq. Calle Ochoa
HATO REY, Puerto Rico 00918
Tel: (809) 754-7800
Hewlett-Packard Puerto Rico
Calle 272 Edificio 203
Urb. Country Club
RIO PIEDRAS, Puerto Rico
P.O. Box 4407
CAROLINA, Puerto Rico 00628
Tel: (809) 762-7255
A,CH,CS

QATAR

Compute Arabia
P.O. Box 2750
DOHA
Tel: 883555
Telex: 4806 CHPARB
P
Eastern Technical Services
P.O. Box 4747
DOHA
Tel: 329 993
Telex: 4156 EASTEC DH
Nasser Trading & Contracting
P.O. Box 1563
DOHA
Tel: 22170, 23539
Telex: 4439 NASSER DH
M

SAUDI ARABIA

Modern Electronic Establishment
Hewlett-Packard Division
P.O. Box 22015
Thuobah
AL-KHOBAR
Tel: 895-1760, 895-1764
Telex: 671 106 HPMECK SJ
Cable: ELECTA AL-KHOBAR
CH,CS,E,M
Modern Electronic Establishment
Hewlett-Packard Division
P.O. Box 1228
Redec Plaza, 6th Floor
JEDDAH
Tel: 644 38 48
Telex: 4027 12 FARNAS SJ
Cable: ELECTA JEDDAH
CH,CS,E,M
Modern Electronic Establishment
Hewlett-Packard Division
P.O. Box 22015
RIYADH
Tel: 491-97 15, 491-63 87
Telex: 202049 MEERYD SJ
CH,CS,E,M
Abdul Ghani El Ajou
P.O. Box 78
RIYADH
Tel: 40 41 717
Telex: 200 932 EL AJOU
P

SCOTLAND

See United Kingdom

SINGAPORE

Hewlett-Packard Singapore (Sales)
Pte. Ltd.
#08-00 Inchcape House
450-2 Alexandra Road
P.O. Box 58 Alexandra Rd. Post Office
SINGAPORE, 9115
Tel: 631788
Telex: HPSGSO RS 34209
Cable: HEWPACK, Singapore
A,CH,CS,E,MS,P



SALES & SUPPORT OFFICES

Arranged alphabetically by country

SINGAPORE (Cont'd)

Dynamar International Ltd.
Unit 05-11 Block 6
Kolam Ayer Industrial Estate
SINGAPORE 1334
Tel: 747-6188
Telex: RS 26283
CM

SOUTH AFRICA

Hewlett-Packard So Africa (Pty.) Ltd.
P.O. Box 120
Howard Place **CAPE PROVINCE 7450**
Pine Park Center, Forest Drive,
Pinelands
CAPE PROVINCE 7405
Tel: 53-7954
Telex: 57-20006
A,CH,CM,E,MS,P
Hewlett-Packard So Africa (Pty.) Ltd.
P.O. Box 37099
92 Overport Drive
DURBAN 4067
Tel: 28-4178, 28-4179, 28-4110
Telex: 6-22954
CH,CM

Hewlett-Packard So Africa (Pty.) Ltd.
6 Linton Arcade
511 Cape Road
Linton Grange
PORT ELIZABETH 6000
Tel: 041-302148
CH

Hewlett-Packard So Africa (Pty.) Ltd.
P.O. Box 33345
Glenstantia 0010 **TRANSVAAL**
1st Floor East
Constantia Park Ridge Shopping
Centre
Constantia Park
PRETORIA
Tel: 982043
Telex: 32163
CH,E

Hewlett-Packard So Africa (Pty.) Ltd.
Private Bag Wendywood
SANDTON 2144
Tel: 802-5111, 802-5125
Telex: 4-20877
Cable: HEWPACK Johannesburg
A,CH,CM,CS,E,MS,P

SPAIN

Hewlett-Packard Española S.A.
Calle Entenza, 321
E-BARCELONA 29
Tel: 322.24.51, 321.73.54
Telex: 52603 hpbee
A,CH,CS,E,MS,P
Hewlett-Packard Española S.A.
Calle San Vicente S/No
Edificio Albia II
E-BILBAO 1
Tel: 423.83.06
A,CH,E,MS

Hewlett-Packard Española S.A.
C/ta. de la Coruña, Km. 16, 400
Las Rozas
E-MADRID
Tel: (1) 637.00.11
CH,CS,M

Hewlett-Packard Española S.A.
Avda. S. Francisco Javier, S/no
Planta 10. Edificio Sevilla 2,
E-SEVILLA 5
Tel: 64.44.54
Telex: 72933
A,CS,MS,P

Hewlett-Packard Española S.A.
Calle Ramon Gorrillo, 1 (Enllo.3)
E-VALENCIA 10
Tel: 361-1354
CH,P

SWEDEN

Hewlett-Packard Sverige AB
Sunnanvagen 14K
S-22226 LUND
Tel: (046) 13-69-79
Telex: (854) 17886 (via Spånga
office)
CH
Hewlett-Packard Sverige AB
Östra Tullgatan 3
S-21128 MALMÖ
Tel: (040) 70270
Telex: (854) 17886 (via Spånga
office)

Hewlett-Packard Sverige AB
Västtra Vintergatan 9
S-70344 ÖREBRO
Tel: (19) 10-48-80
Telex: (854) 17886 (via Spånga
office)
CH

Hewlett-Packard Sverige AB
Skaltholmsgatan 9, Kista
Box 19
S-16393 SPÅNGA
Tel: (08) 750-2000
Telex: (854) 17886
Telefax: (08) 7527781
A,CH,CM,CS,E,MS,P
Hewlett-Packard Sverige AB
Frölalmsgatan 30
S-42132 VÄSTRA-FRÖLUNDA
Tel: (031) 49-09-50
Telex: (854) 17886 (via Spånga
office)
CH,E,P

SWITZERLAND

Hewlett-Packard (Schweiz) AG
Clarastrasse 12
CH-4058 BASEL
Tel: (61) 33-59-20
A

Hewlett-Packard (Schweiz) AG
7, rue du Bois-du-Lan
Case Postale 365
CH-1217 MEYRIN 2
Tel: (0041) 22-83-11-11
Telex: 27333 HPAG CH
CH,CM,CS

Hewlett-Packard (Schweiz) AG
Allmend 2
CH-8967 WIDEN
Tel: (0041) 57 31 21 11
Telex: 53933 hpag ch
Cable: HPAG CH
A,CH,CM,CS,E,MS,P

SYRIA

General Electronic Inc.
Nuri Basha Ahnaf Ebn Kays Street
P.O. Box 5781
DAMASCUS
Tel: 33-24-87
Telex: 411 215
Cable: ELECTROBOR DAMASCUS
E

Middle East Electronics
P.O. Box 2308
Abu Rummaneh
DAMASCUS
Tel: 33 4 5 92
Telex: 411 304
M

TAIWAN

Hewlett-Packard Far East Ltd.
Kaohsiung Office
2/F 68-2, Chung Cheng 3rd Road
KAOHSIUNG
Tel: (07) 241-2318
CH,CS,E

Hewlett-Packard Far East Ltd.
Taiwan Branch
8th Floor
337 Fu Hsing North Road
TAIPEI

Tel: (02) 712-0404
Telex: 24439 HEWPACK
Cable: HEWPACK Taipei
A,CH,CM,CS,E,M,P
Ing Lih Trading Co.
3rd Floor, 7 Jen-Ai Road, Sec. 2
TAIPEI 100
Tel: (02) 3948191
Cable: INGLIH TAIPEI
A

THAILAND

Unimesa
30 Patpong Ave., Suriwong
BANGKOK 5
Tel: 235-5727
Telex: 84439 Simonco TH
Cable: UNIMESA Bangkok
A,CH,CS,E,M
Bangkok Business Equipment Ltd.
5/5-6 Dejo Road
BANGKOK
Tel: 234-8670, 234-8671
Telex: 87669-BEQUIPT TH
Cable: BUSIQUIPT Bangkok
P

TRINIDAD & TOBAGO

Caribbean Telecoms Ltd.
50/A Jerningham Avenue
P.O. Box 732
PORT-OF-SPAIN
Tel: 62-44213, 62-44214
Telex: 235,272 HUGCO WG
CM,E,M,P

TUNISIA

Tunisie Electronique
31 Avenue de la Liberte
TUNIS
Tel: 280-144
E,P
Corema
1 ter. Av. de Carthage
TUNIS
Tel: 253-821
Telex: 12319 CABAM TN
M

TURKEY

Teknim Company Ltd.
Iran Caddesi No. 7
Kavaklidere, **ANKARA**
Tel: 275800
Telex: 42155 TKNM TR
E

E.M.A.
Medina Eldem Sokak No.41/6
Yüksel Caddesi
ANKARA
Tel: 175 622
Telex: 42 591
M

UNITED ARAB EMIRATES

Emitac Ltd.
P.O. Box 2711
ABU DHABI
Tel: 82 04 19-20
Cable: EMITAC ABUDHABI
Emitac Ltd.
P.O. Box 1641
SHARJAH
Tel: 591 181
Telex: 68136 Emitac Sh
CH,CS,E,M,P

UNITED KINGDOM

GREAT BRITAIN

Hewlett-Packard Ltd.
Trafalgar House
Navigation Road
ALTRINCHAM
Cheshire WA14 1NU
Tel: 061 928 6422
Telex: 668068
A,CH,CS,E,M,MS,P
Hewlett-Packard Ltd.
Elstree House, Elstree Way
BOREHAMWOOD, Herts WD6 1SG
Tel: 01 207 5000
Telex: 89527 16
E,CH,CS,P
Hewlett-Packard Ltd.
Oakfield House, Oakfield Grove
Clifton **BRISTOL**, Avon BS8 2BN
Tel: 0272 736806
Telex: 444302
CH,CS,E,P

Hewlett-Packard Ltd.
Bridewell House
Bridewell Place
LONDON EC4V 6BS
Tel: 01 583 6565
Telex: 298163
CH,CS,P

Hewlett-Packard Ltd.
Fourier House
257-263 High Street
LONDON COLNEY
Herts. AL2 1HA, St. Albans
Tel: 0727 24400
Telex: 1-89527 16
CH,CS

Hewlett-Packard Ltd.
Pontefract Road
NORMANTON, West Yorkshire WF6 1RN
Tel: 0924 895566
Telex: 557355
CH,CS,P

Hewlett-Packard Ltd.
The Quadrangle
106-118 Station Road
REDHILL, Surrey RH1 1PS
Tel: 0737 68655
Telex: 947234
CH,CS,E,P

SALES & SUPPORT OFFICES

Arranged alphabetically by country

7



GREAT BRITAIN (Cont'd)

Hewlett-Packard Ltd.
Avon House
435 Stratford Road
Shirley, SOLIHULL, West Midlands
B90 4BL

Tel: 021 745 8800
Telex: 339105
CH,CS,E,P

Hewlett-Packard Ltd.
West End House
41 High Street, West End
SOUTHAMPTON

Hampshire SO3 30Q
Tel: 04218 6767
Telex: 477138
CH,CS,P

Hewlett-Packard Ltd.
Eskdale Rd.
Winnersh, **WOKINGHAM**
Berkshire RG11 50Z
Tel: 0734 696622
Telex: 848884
E

Hewlett-Packard Ltd.
King Street Lane
Winnersh, **WOKINGHAM**
Berkshire RG11 5AR
Tel: 0734 784774
Telex: 847178
A,CH,CS,E,M,MP,P

Hewlett-Packard Ltd.
Nine Mile Ride
Easthampstead, **WOKINGHAM**
Berkshire, 3RG11 3LL
Tel: 0344 773100
Telex: 848805
CH,CS,E,P

IRELAND

NORTHERN IRELAND

Hewlett-Packard Ltd.
Cardiac Services Building
95A Finaghy Road South
BELFAST BT10 0BY
Tel: 0232 625-566
Telex: 747626
CH,CS

SCOTLAND

Hewlett-Packard Ltd.
SOUTH QUEENSFERRY
West Lothian, EH30 9TG
Tel: 031 331 1188
Telex: 72682
CH,CM,CS,E,M,P

UNITED STATES

Alabama

Hewlett-Packard Co.
700 Century Park South, Suite 128
BIRMINGHAM, AL 35226
Tel: (205) 822-6802
A,CH,M

Hewlett-Packard Co.
420 Wynn Drive
HUNTSVILLE, AL 35805
P.O. Box 7700
HUNTSVILLE, AL 35807
Tel: (205) 830-2000
CH,CM,CS,E,M*

Arizona

Hewlett-Packard Co.
8080 Pointe Parkway West
PHOENIX, AZ 85044
Tel: (602) 273-8000
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
2424 East Aragon Road
TUCSON, AZ 85706
Tel: (602) 889-4631
CH,E,MS**

California

Hewlett-Packard Co.
99 South Hill Or.
BRISBANE, CA 94005
Tel: (415) 330-2500
CH,CS

Hewlett-Packard Co.
P.O. Box 7830 (93747)
5060 E. Clinton Avenue, Suite 102
FRESNO, CA 93727
Tel: (209) 252-9652
CH,CS,MS

Hewlett-Packard Co.
P.O. Box 4230
1430 East Orangethorpe
FULLERTON, CA 92631
Tel: (714) 870-1000
CH,CM,CS,E,MP

Hewlett-Packard Co.
320 S. Kellogg, Suite B
GOLETA, CA 93117
Tel: (805) 967-3405
CH

Hewlett-Packard Co.
5400 W. Rosecrans Boulevard
LAWDALE, CA 90260
P.O. Box 92105
LOS ANGELES, CA 90009
Tel: (213) 970-7500
Telex: 910-325-6608
CH,CM,CS,MP

Hewlett-Packard Co.
3155 Porter Oaks Drive
PALO ALTO, CA 94304
Tel: (415) 857-8000
CH,CS,E

Hewlett-Packard Co.
4244 So. Market Court, Suite A
P.O. Box 15976
SACRAMENTO, CA 95852
Tel: (916) 929-7222
A*,CH,CS,E,MS

Hewlett-Packard Co.
9606 Aero Drive
P.O. Box 23333
SAN DIEGO, CA 92139
Tel: (619) 279-3200
CH,CM,CS,E,MP

Hewlett-Packard Co.
2305 Camino Ramon "C"
SAN RAMON, CA 94583
Tel: (415) 838-5900
CH,CS

Hewlett-Packard Co.
3005 Scott Boulevard
SANTA CLARA, CA 95050
Tel: (408) 988-7000
Telex: 910-338-0586
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
5703 Corsa Avenue
WESTLAKE VILLAGE, CA 91362
Tel: (213) 706-6800
E*,CH*,CS*

Colorado

Hewlett-Packard Co.
24 Inverness Place, East
ENGLEWOOD, CO 80112
Tel: (303) 649-5000
A,CH,CM,CS,E,MS

Connecticut

Hewlett-Packard Co.
47 Barnes Industrial Road South
P.O. Box 5007
WALLINGFORD, CT 06492
Tel: (203) 265-7801
A,CH,CM,CS,E,MS

Florida

Hewlett-Packard Co.
2901 N.W. 62nd Street
P.O. Box 24210
FORT LAUDERDALE, FL 33307
Tel: (305) 973-2600
CH,CS,E,MP

Hewlett-Packard Co.
6177 Lake Ellenor Drive
P.O. Box 13910
ORLANDO, FL 32859
Tel: (305) 859-2900
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
5750B N. Hoover Blvd., Suite 123
P.O. Box 15200
TAMPA, FL 33614
Tel: (813) 884-3282
A*,CH,CM,CS,E*,M*

Georgia

Hewlett-Packard Co.
2000 South Park Place
P.O. Box 105005
ATLANTA, GA 30348
Tel: (404) 955-1500
Telex: 810-766-4890
A,CH,CM,CS,E,MP

Hawaii

Hewlett-Packard Co.
Kawaiahao Plaza, Suite 190
567 South King Street
HONOLULU, HI 96813
Tel: (808) 526-1555
A,CH,E,MS

Illinois

Hewlett-Packard Co.
304 Eldorado Road
P.O. Box 1607
BLOOMINGTON, IL 61701
Tel: (309) 662-9411
CH,MS**

Hewlett-Packard Co.
1100 31st Street, Suite 100
DOWNERS GROVE, IL 60515
Tel: (312) 960-5760
CH,CS

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800
Telex: 910-687-1066
A,CH,CM,CS,E,MP

Indiana

Hewlett-Packard Co.
7301 No. Shadeland Avenue
P.O. Box 50807
INDIANAPOLIS, IN 46250
Tel: (317) 842-1000
A,CH,CM,CS,E,MS

Iowa

Hewlett-Packard Co.
1776 22nd Street, Suite 1
WEST DES MOINES, IA 50265
Tel: (515) 224-1435
CH,MS**

Kansas

Hewlett-Packard Co.
7804 East Funston Road, #203
WICHITA, KS 67207
Tel: (316) 684-8491
CH

Kentucky

Hewlett-Packard Co.
10300 Linn Station Road, #100
LOUISVILLE, KY 40223
Tel: (502) 426-0100
A,CH,CS,MS

Louisiana

Hewlett-Packard Co.
160 James Drive East
ST. ROSE, LA 70087
P.O. Box 1449
KENNER, LA 70063
Tel: (504) 467-4100
A,CH,CS,E,MS

Maryland

Hewlett-Packard Co.
3701 Koppers Street
BALTIMORE, MD 21227
Tel: (301) 644-5800
Telex: 710-862-1943
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
2 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 948-6370
A,CH,CM,CS,E,MP

Massachusetts

Hewlett-Packard Co.
1775 Minuteman Road
ANDOVER, MA 01810
Tel: (617) 682-1500
A,C,CH,CS,CM,E,MP,P*
Hewlett-Packard Co.
32 Hartwell Avenue
LEXINGTON, MA 02173
Tel: (617) 861-8960
CH,CS,E

Michigan

Hewlett-Packard Co.
4326 Cascade Road S.E.
GRAND RAPIDS, MI 49506
Tel: (616) 957-1970
CH,CS,MS

Hewlett-Packard Co.
1771 W. Big Beaver Road
TROY, MI 48084
Tel: (313) 643-6474
CH,CS

Minnesota

Hewlett-Packard Co.
2025 W. LaSalle Ave.
ST. PAUL, MN 55113
Tel: (612) 644-1100
A,CH,CM,CS,E,MP

Missouri

Hewlett-Packard Co.
11131 Colorado Avenue
KANSAS CITY, MO 64137
Tel: (816) 763-8000
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
13001 Hollenberg Drive
BRIDGETON, MO 63044
Tel: (314) 344-5100
A,CH,CS,E,MP



SALES & SUPPORT OFFICES

Arranged alphabetically by country

UNITED STATES (Cont'd)

Nebraska

Hewlett-Packard
10824 Old Mill Rd., Suite 3
OMAHA, NE 68154
Tel: (402) 334-1813
CM,MS

New Jersey

Hewlett-Packard Co.
120 W. Century Road
PARAMUS, NJ 07652
Tel: (201) 265-5000
A,CH,CM,CS,E,MP
Hewlett-Packard Co.
60 New England Av. West
PISCATAWAY, NJ 08854
Tel: (201) 981-1199
A,CH,CM,CS,E

New Mexico

Hewlett-Packard Co.
11300 Lomas Blvd., N.E.
P.O. Box 11634
ALBUQUERQUE, NM 87112
Tel: (505) 292-1330
CH,CS,E,MS

New York

Hewlett-Packard Co.
5 Computer Drive South
ALBANY, NY 12205
Tel: (518) 458-1550
A,CH,E,MS
Hewlett-Packard Co.
9600 Main Street
P.O. Box AC
CLARENCE, NY 14031
Tel: (716) 759-8621
CH
Hewlett-Packard Co.
200 Cross Keys Office Park
FAIRPORT, NY 14450
Tel: (716) 223-9950
CH,CM,CS,E,MS
Hewlett-Packard Co.
7641 Henry Clay Blvd.
LIVERPOOL, NY 13088
Tel: (315) 451-1820
A,CH,CM,E,MS
Hewlett-Packard Co.
No. 1 Pennsylvania Plaza
55th Floor
34th Street & 8th Avenue
MANHATTAN NY 10119
Tel: (212) 971-0800
CH,CS,E*,M*
Hewlett-Packard Co.
250 Westchester Avenue
WHITE PLAINS, NY 10604
Tel: (914) 684-6100
CM,CH,CS,E
Hewlett-Packard Co.
3 Crossways Park West
WOODBURY, NY 11797
Tel: (516) 921-0300
A,CH,CM,CS,E,MS
Hewlett-Packard Co.
5605 Roanne Way
P.O. Box 26500
GREENSBORO, NC 27420
Tel: (919) 852-1800
A,CH,CM,CS,E,MS

Ohio

Hewlett-Packard Co.
9920 Carver Road
CINCINNATI, OH 45242
Tel: (513) 891-9870
CH,CS,MS
Hewlett-Packard Co.
16500 Sprague Road
CLEVELAND, OH 44130
Tel: (216) 243-7300
A,CH,CM,CS,E,MS
Hewlett-Packard Co.
962 Crupper Ave.
COLUMBUS, OH 43229
Tel: (614) 436-1041
Eff: Nov. 25, 1983
675 Brooksedge Blvd.
WESTERVILLE, OH 43081
CH,CM,CS,E*
Hewlett-Packard Co.
330 Progress Rd.
DAYTON, OH 45449
Tel: (513) 859-8202
A,CH,CM,E*,MS
Hewlett-Packard Co.
304 N. Meridian, Suite A
P.O. Box 75609
OKLAHOMA CITY, OK 73147
Tel: (405) 946-9499
A*,CH,E*,MS
Hewlett-Packard Co.
3840 S. 103rd E. Avenue, #100
P.O. Box 35747
TULSA, OK 74153
Tel: (918) 665-3300
A**,CH,CS,M*

Oregon

Hewlett-Packard Co.
9255 S. W. Pioneer Court
P.O. Box 328
WILSONVILLE, OR 97070
Tel: (503) 682-8000
A,CH,CS,E*,MS

Pennsylvania

Hewlett-Packard Co.
111 Zeta Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400
A,CH,CS,E,MP
Hewlett-Packard Co.
2750 Monroe Boulevard
P.O. Box 713
VALLEY FORGE, PA 19482
Tel: (215) 666-9000
A,CH,CM,E,M

South Carolina

Hewlett-Packard Co.
Brookside Park, Suite 122
1 Harbison Way
P.O. Box 21708
COLUMBIA, SC 29221
Tel: (803) 732-0400
CH,E,MS
Hewlett-Packard Co.
Koger Executive Center
Chesterfield Bldg., Suite 124
GREENVILLE, SC 29615
Tel: (803) 297-4120

Tennessee

Hewlett-Packard Co.
224 Peters Road, Suite 102
P.O. Box 22490
KNOXVILLE, TN 37922
Tel: (615) 691-2371
A*,CH,MS

Hewlett-Packard Co.
3070 Directors Row
MEMPHIS, TN 38131
Tel: (901) 346-8370
A,CH,MS

Texas

Hewlett-Packard Co.
4171 North Mesa
Suite C-110
EL PASO, TX 79902
Tel: (915) 533-3555
CH,E*,MS**
Hewlett-Packard Co.
10535 Harwin Drive
P.O. Box 42816
HOUSTON, TX 77042
Tel: (713) 776-6400
A,CH,CM,CS,E,MP
Hewlett-Packard Co.
930 E. Campbell Rd.
P.O. Box 1270
RICHARDSON, TX 75080
Tel: (214) 231-6101
A,CH,CM,CS,E,MP
Hewlett-Packard Co.
1020 Central Parkway South
P.O. Box 32993
SAN ANTONIO, TX 78216
Tel: (512) 494-9336
CH,CS,E,MS

Utah

Hewlett-Packard Co.
3530 W. 2100 South
SALT LAKE CITY, UT 84119
Tel: (801) 974-1700
A,CH,CS,E,MS

Virginia

Hewlett-Packard Co.
4305 Cox Road
GLEN ALLEN, VA 23060
P.O. Box 9669
RICHMOND, VA 23228
Tel: (804) 747-7750
A,CH,CS,E,MS

Washington

Hewlett-Packard Co.
15815 S.E. 37th Street
BELLEVUE, WA 98006
Tel: (206) 643-4000
A,CH,CM,CS,E,MP
Hewlett-Packard Co.
Suite A
708 North Argonne Road
SPOKANE, WA 99212
Tel: (509) 922-7000
CH,CS

West Virginia

Hewlett-Packard Co.
4604 MacCorkle Ave.
P.O. Box 4297
CHARLESTON, WV 25304
Tel: (304) 925-0492
A,MS

Wisconsin

Hewlett-Packard Co.
150 S. Sunny Slope Road
BROOKFIELD, WI 53005
Tel: (414) 784-8800
A,CH,CS,E*,MP

URUGUAY

Pablo Ferrando S.A.C. e l.
Avenida Italia 2877
Casilla de Correo 370
MONTEVIDEO
Tel: 80-2586
Telex: Public Booth 901
A,CM,E,M

VENEZUELA

Hewlett-Packard de Venezuela C.A.
3RA Transversal Los Ruices Norte
Edificio Segre 1, 2 & 3
Apartado 50933
CARACAS 1071
Tel: 239-4133
Telex: 251046 HEWPACK
A,CH,CS,E,MS,P
Hewlett-Packard de Venezuela C.A.
Calle-72-Entre 3H y 3Y, No. 3H-40
Edificio Ada-Evelyn, Local B
Apartado 2646
4001, MARACAIBO, Estado Zulia
Tel: (061) 80.304
C,E*
Hewlett-Packard de Venezuela C.A.
Calle Vargas Rondon .
Edificio Seguros Carabobo, Piso 10
VALENCIA
Tel: (041) 51 385
CH,CS,P
Bioelectronica Medica C.A.
Calle Buen Pastor
Edif. Cota Mil-Piso 2 y Semi Sotano 1
Boleita Norte
Apartado 50710 CARACAS 1050A
Tel: 239 84 41
Telex: 26518
ZIMBABWE
Field Technical Sales
45 Kelvin Road, North
P.B. 3458
SALISBURY
Tel: 705 231
Telex: 4-122 RH
C,E,M,P

July 1983 5952-6900

Indicates main office

HP distributors are printed in italics.

